

OPERATING AND PROGRAMMING INSTRUCTIONS

Digital RFID Lock



FUNCTION	MODE		KEY SEQUENCE	NOTES		
	PUBLIC	PRIVATE				
MASTER CODE FUNCTIONS - FOR STEPS 1-3 PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)						
			STEP 1	STEP 2	STEP 3	
ADD MASTER CARD	✓	✓	[logo] [logo] [Old Master CARD] [press logo until]	★ ★ ★ ★ ★	[Old Master CARD] [New Master CARD] (hold new card for 5 seconds)	
DELETE SINGLE MASTER CARD (with card)			[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Scan Master card to delete] [Master CARD]	
DELETE SINGLE MASTER CARD (without card)			[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[press logo until master light config is shown] [Master CARD]	
ADD USER CARD		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [New USER CARD]	Record light sequence after adding for user number
DELETE ALL USER CARDS		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [press logo until] ★ ★ ★ ★ ★ [Master CARD]	DELETES ALL USER CODES
DELETE USER CARD	✓		[Master CARD]			OPENS LOCK AND DELETES USER CODE
DELETE SINGLE USER CARD(with card)		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [Scan USER card]	Deletes that user card
DELETE SINGLE USER CARD (without card)		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [press logo until user light config is shown] [Master CARD]	Deletes the user in that location
OPEN LOCK	✓	✓	[Master CARD]		[logo]	DELETES USER CARD IN PUBLIC MODE
CLOSE LOCK		AUTO			[logo]	RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
SET PUBLIC MODE		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	
SET PRIVATE MODE	✓		[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	
SET AUDIO ON	✓	✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	Turns AUDIO ON
SET AUDIO OFF	✓	✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	Turns Audio OFF
SET AUTO-TIMED UNLOCK ON & SET TIME	✓		[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [Press logo to cycle lights for time (see timer functions)] [Master CARD]	SEE NOTES ON TIMERS BELOW.
SET AUTO-TIMED UNLOCK OFF	✓		[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	Turns Audio OFF
ECO MODE SET	✓	✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	Default mode
SLOW SCAN MODE SET	✓	✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	SEE NOTES ON TIMERS BELOW.
USER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)						
OPEN LOCK	✓	✓	Scan USER card (Eco Mode requires logo button press before scan)			
CLOSE LOCK	✓		Scan USER card (Eco Mode requires logo button press before scan)			
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
FUNCTIONS AVAILABLE TO ALL CODES						
BATTERY CHECK	✓	✓	[logo] [logo] [logo]			REPLACE BATTERIES IF RED LIGHT SHOWS
NOTES	TIMER FUNCTIONS	TIMER INTERVALS	MODE DEFINITION	MODE	BATTERY CONDITION INDICATOR	
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.	★ ★ ★ ★ ★	1 HOUR	ECO	BUTTON PRESS FIRST	FOUR GREEN LIGHTS - EXCELLENT	
	★ ★ ★ ★ ★	2 HOURS	SCAN	2 Second Scan	THREE GREEN LIGHTS - VERY GOOD	
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.	★ ★ ★ ★ ★	4 HOURS			TWO GREEN LIGHTS - GOOD	
	★ ★ ★ ★ ★	6 HOURS			ONE GREEN LIGHT - LOW	
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.	★ ★ ★ ★ ★	8 HOURS			RED LIGHT -	
	★ ★ ★ ★ ★	10 HOURS			CHANGE BATTERIES AS SOON AS POSSIBLE	
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.	★ ★ ★ ★ ★	12 HOURS			FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE CHANGE BATTERIES AS SOON AS POSSIBLE	
	★ ★ ★ ★ ★	16 HOURS				
ALL TIMES ARE APPROXIMATE +/- 10%						
ENSURE THAT YOU KEEP A SAFE RECORD OF YOUR USER CARDS. ENSURE YOU KEEP THE MASTER CARD SAFE WITHOUT IT YOU CAN'T CHANGE ADD OR DELETE USERS						