 
 
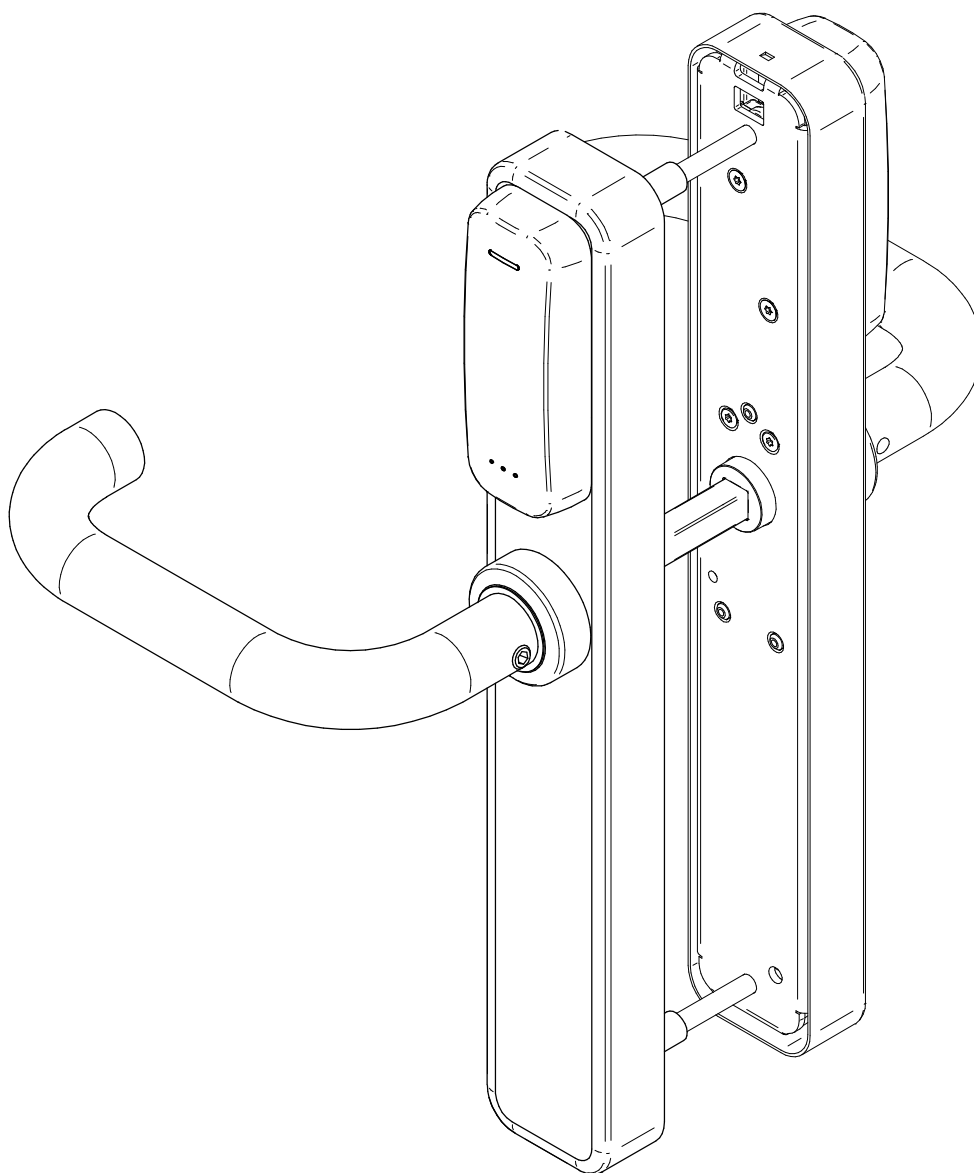 
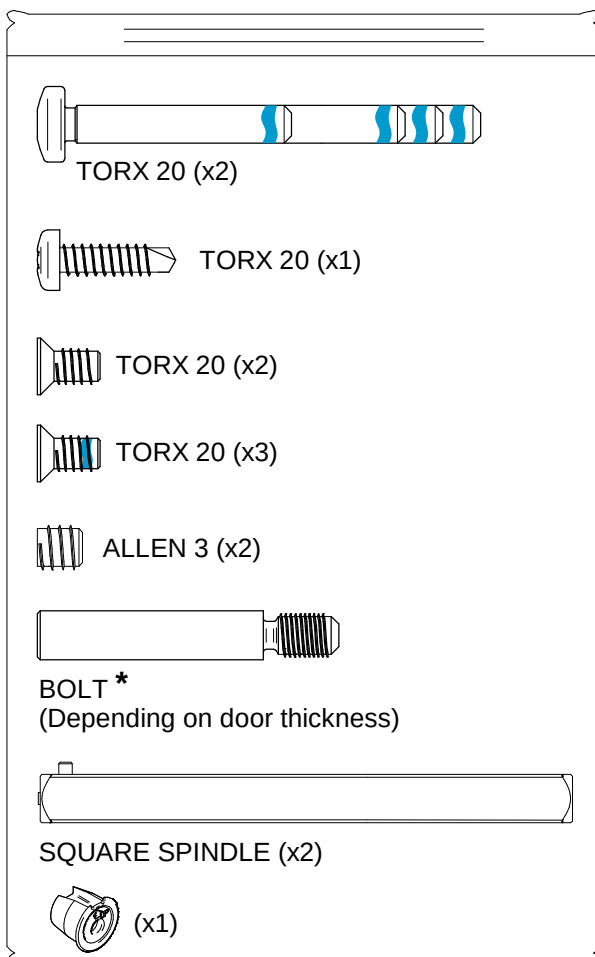 




XS4 One S Euro Double Reader

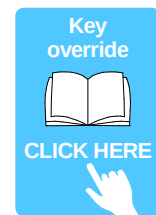

The Salto XS4 One S narrow body version is designed to fit most European profile doors and mortise locks standards. Easy to install and retrofit, it can replace your existing door hardware and fits any door with a broad range of different models and functions. The XS4 One S incorporates the latest BLUEnet wireless and mobile credentials technology to accommodate access control needs of both today and tomorrow.

  E i 8xx.. D series

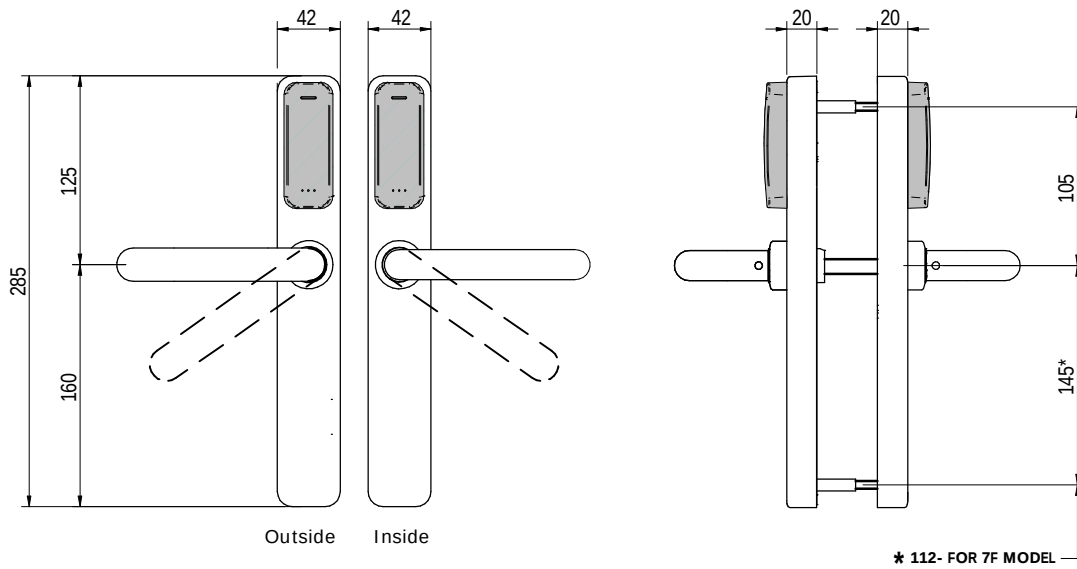

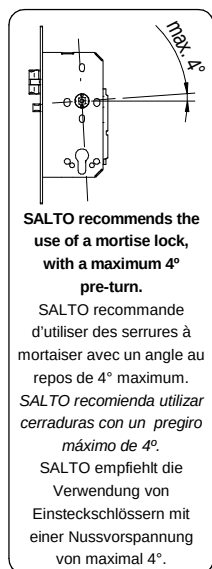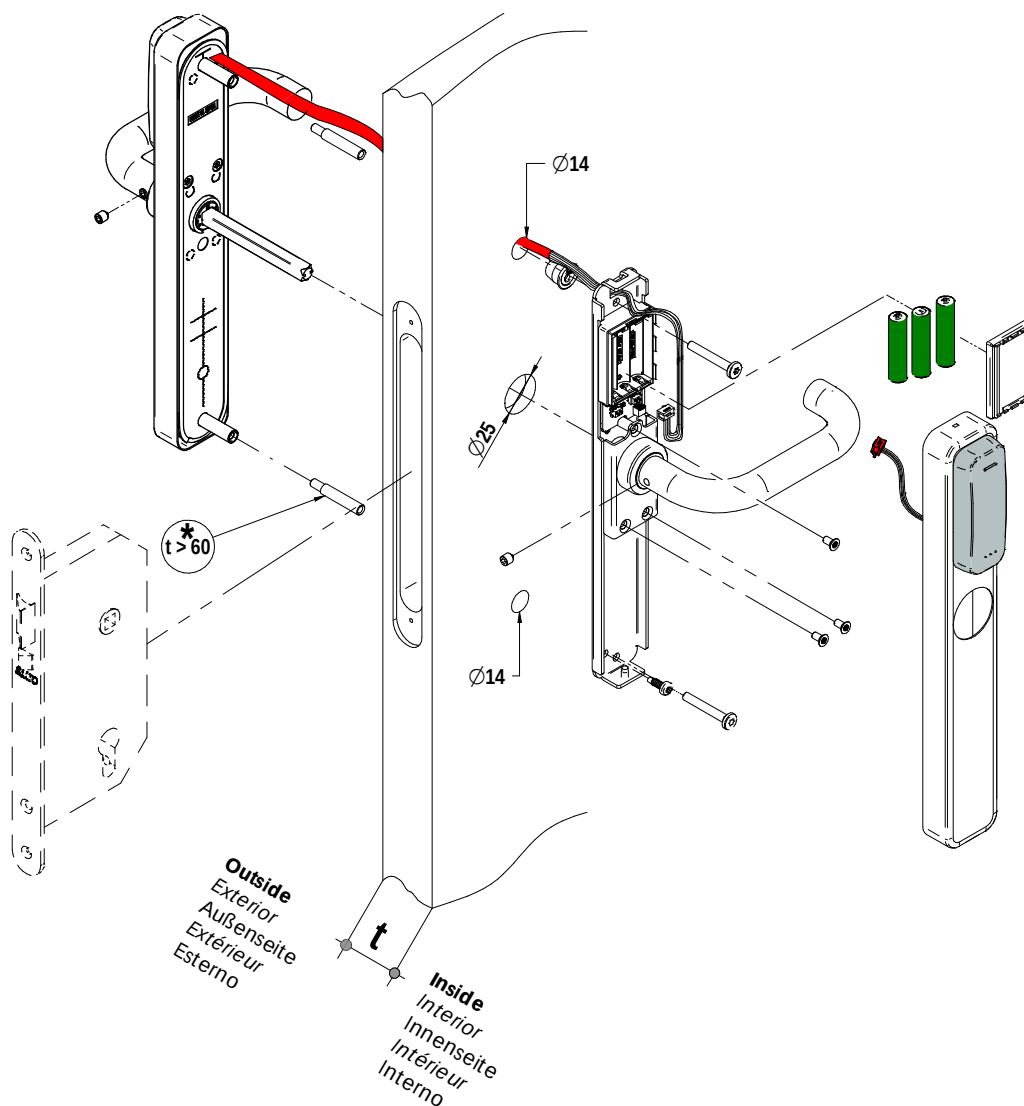



*** Required only for doors that exceed 60mm [2-3/8"] thickness.**

* Requis uniquement pour les portes dont l'épaisseur dépasse 60 mm [2-3/8 po].

* Sólo para puertas de espesor mayor de 60mm [2-3/8"].

* Nur bei Tüerstärken über 60 mm [2-3/8"] erforderlich.

  
* Richiesto solo per porte con spessore superiore a 60 mm [2-3/8"].

	t Door thickness		
3	32 - 47mm	35 mm	-
4	45 - 60 mm	50 mm	-
6	60 - 75 mm	30 mm	x2
7	75 - 90 mm	45 mm	x2
9	90 - 105 mm	30 mm	x4
1	105 - 120 mm	45 mm	x4
2	32 - 53 mm	35 mm	-
A		35 mm	-
B		45 mm	-
5		45 mm	-




1

 Through spindle

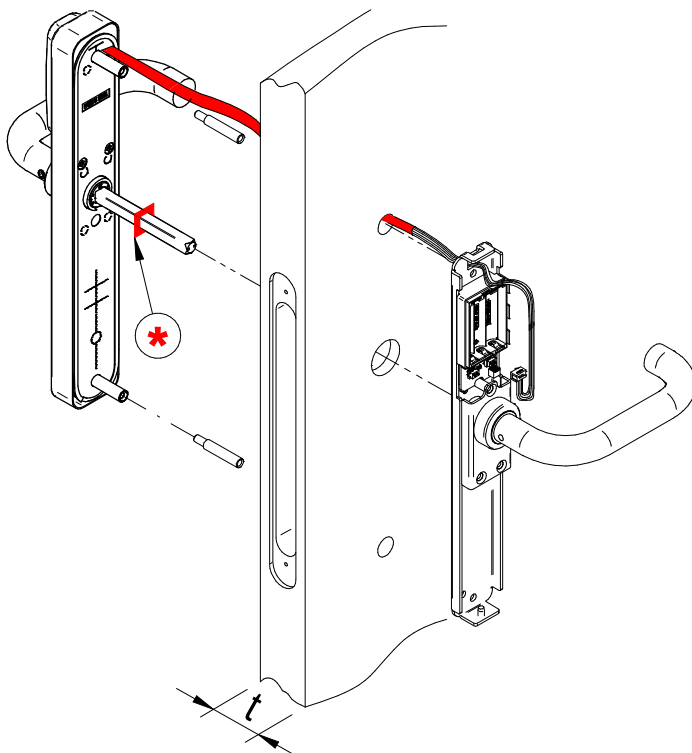


* THROUGH SPINDLE

 Standard models


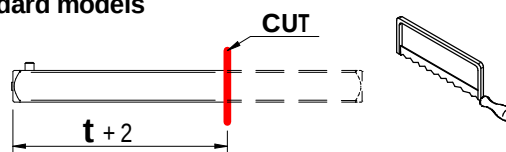


For outdoor version models

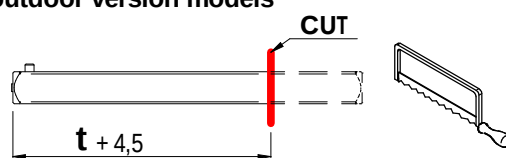 

2

  
Split spindle

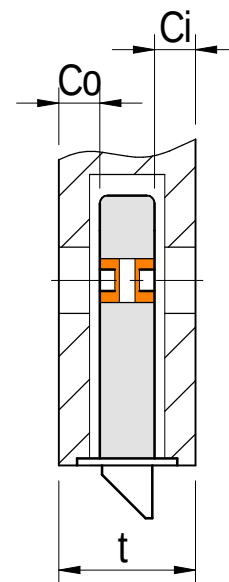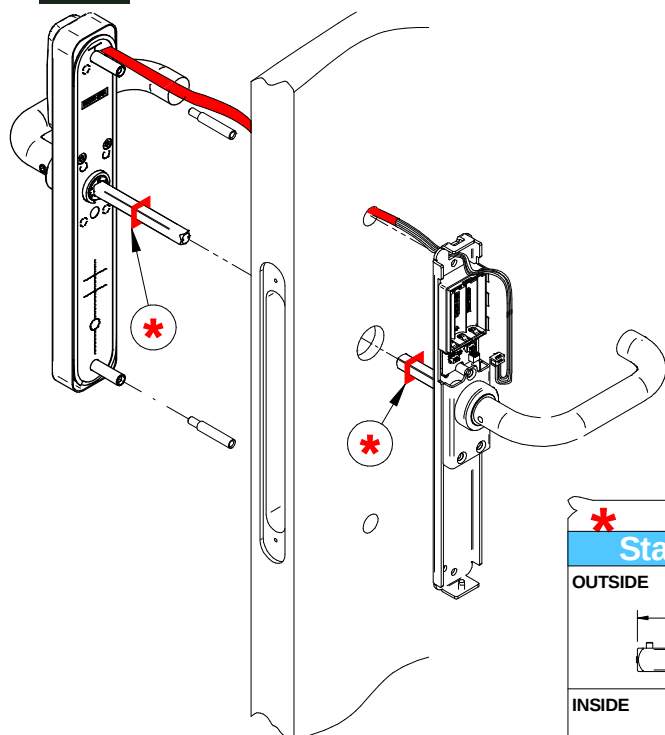


* SPLIT SPINDLE

Standard models

 OUTSIDE




INSIDE

 


Outdoor models

 OUTSIDE




INSIDE

 


(Eng) Select handing (E) Seleccione mano (D) Drückerrichtung wählen
 (F) Choisir le sens de la bêteuille (I) Scegliere il verso (P) Seleccione mão

 1

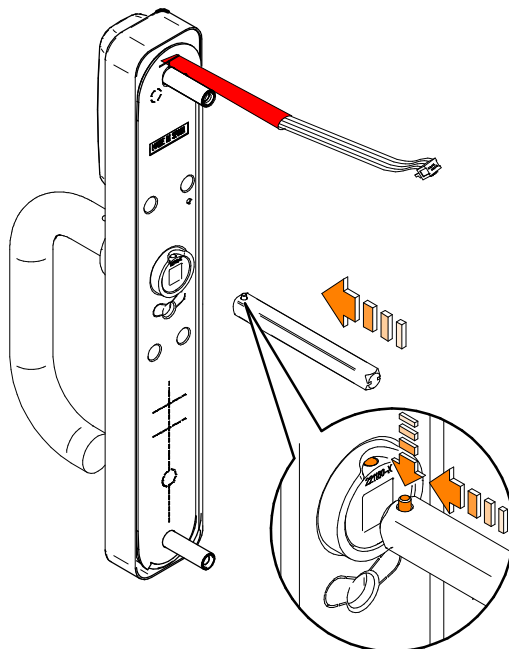

2

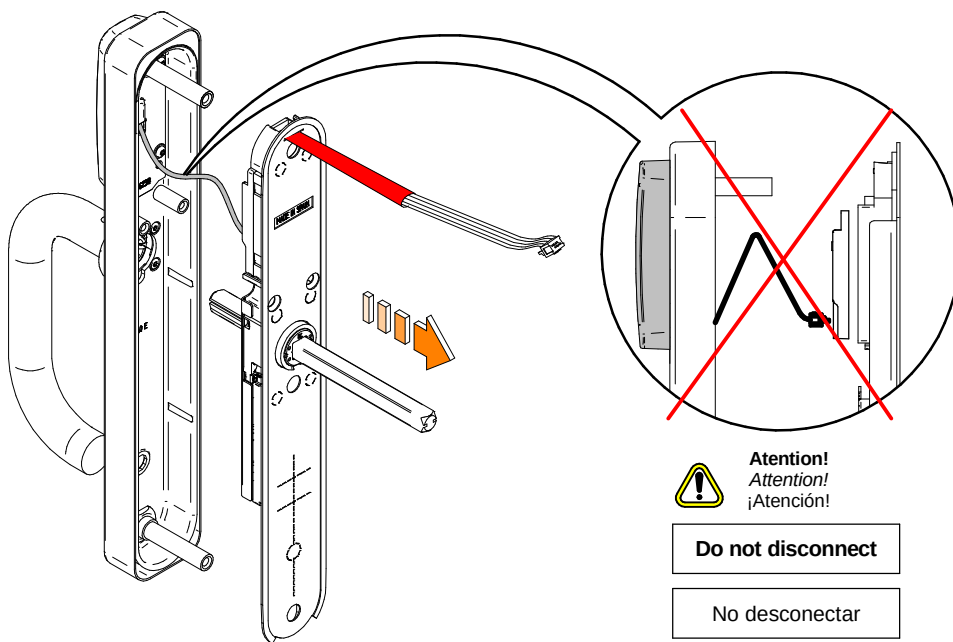 

Attention!
Attention!
¡Atención!

Do not disconnect

No desconectar

 
Nicht trennen

Ne pas déconnecter


Non scollegare

Não desligue



3

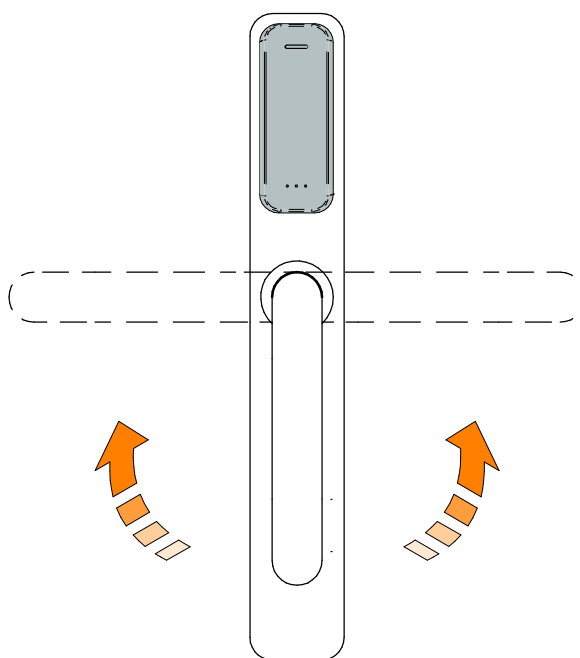



4

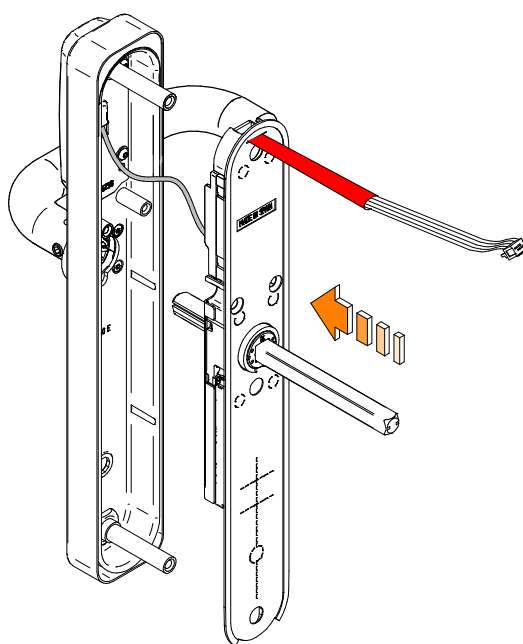 


5

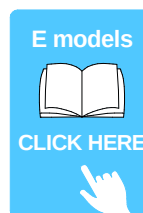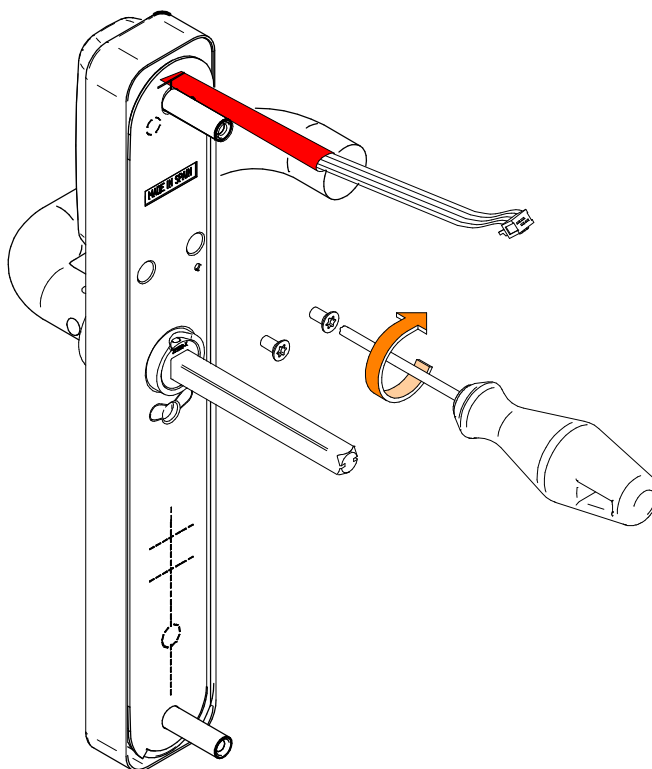  


1

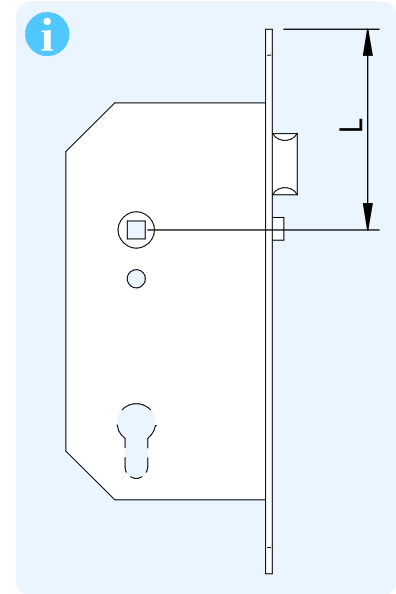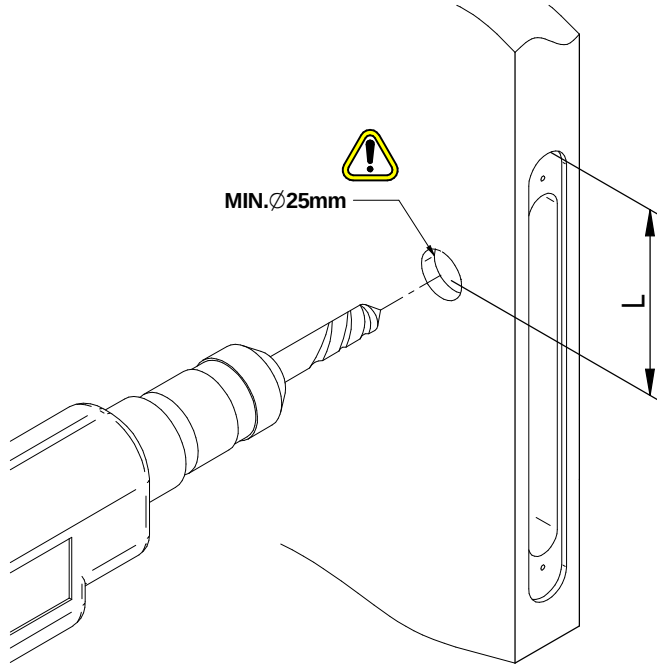  


2

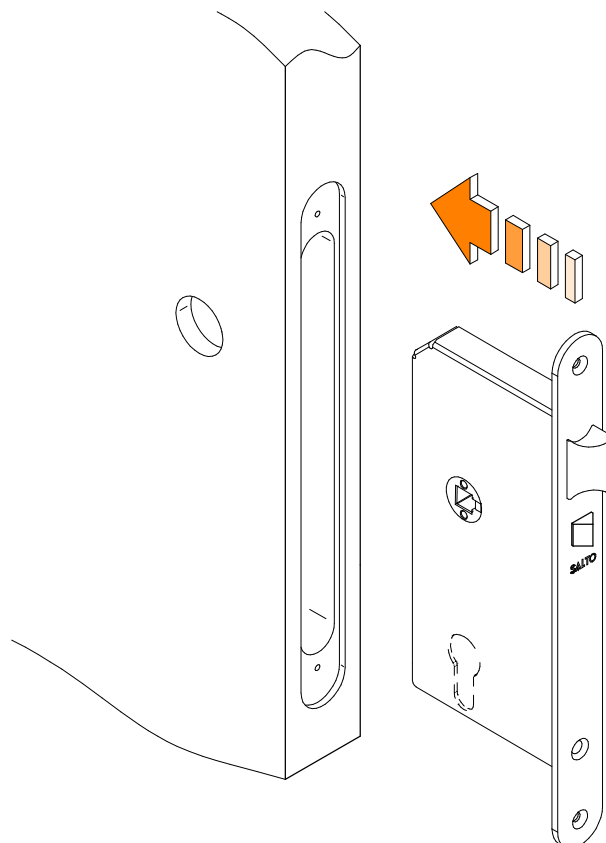 


3

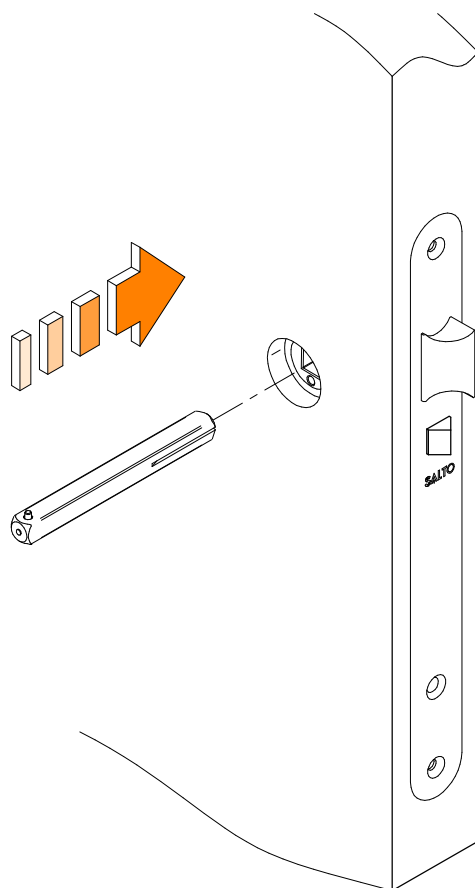 


4

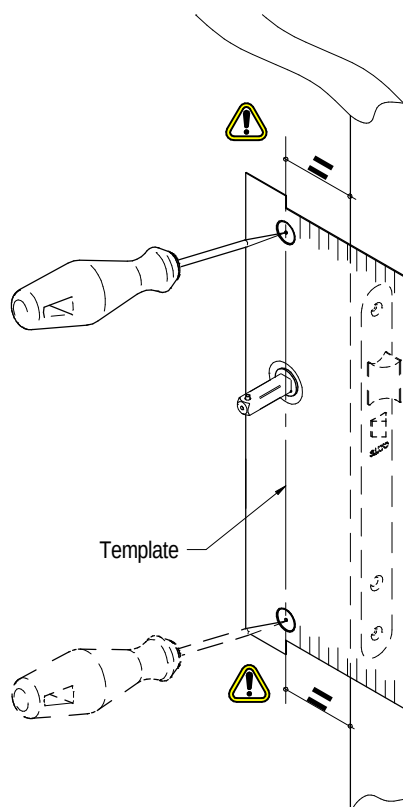 


5

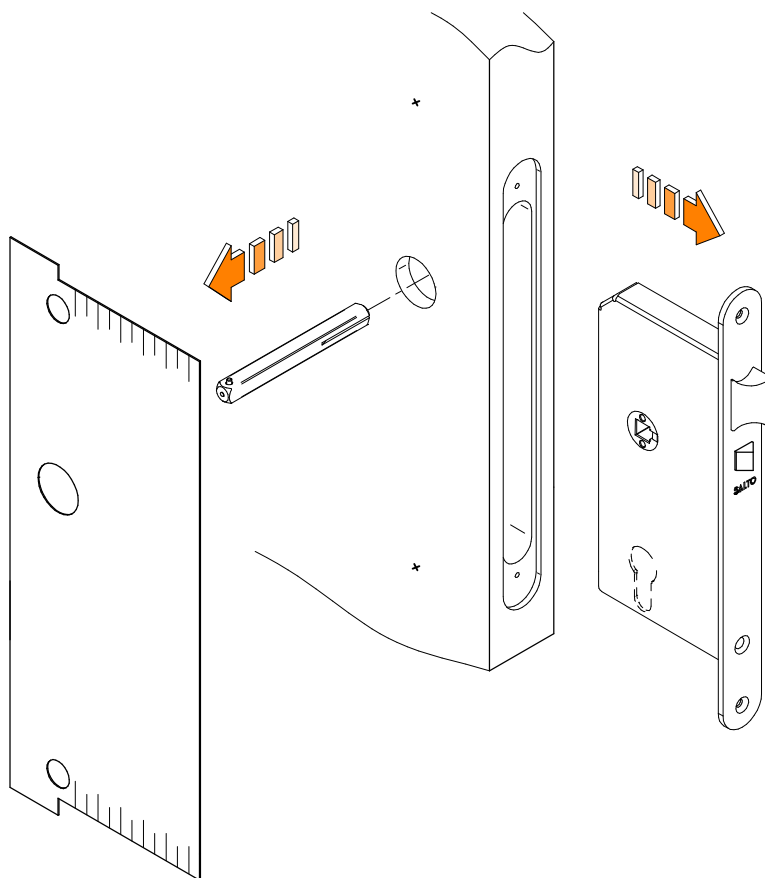 


6

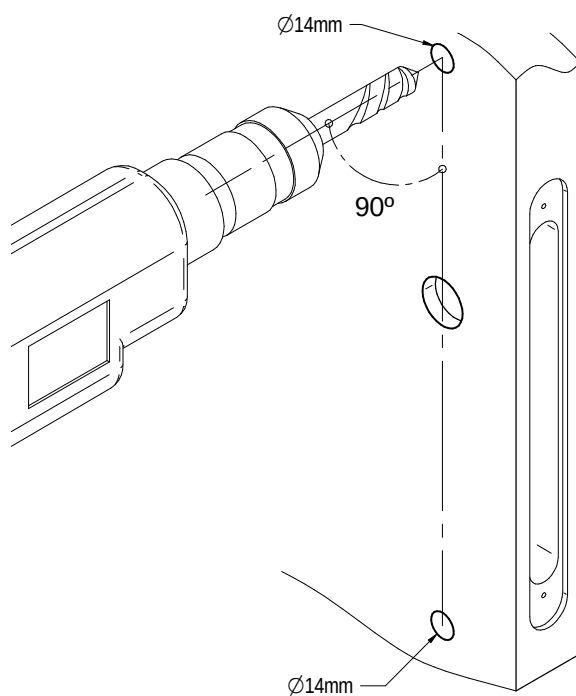 


7

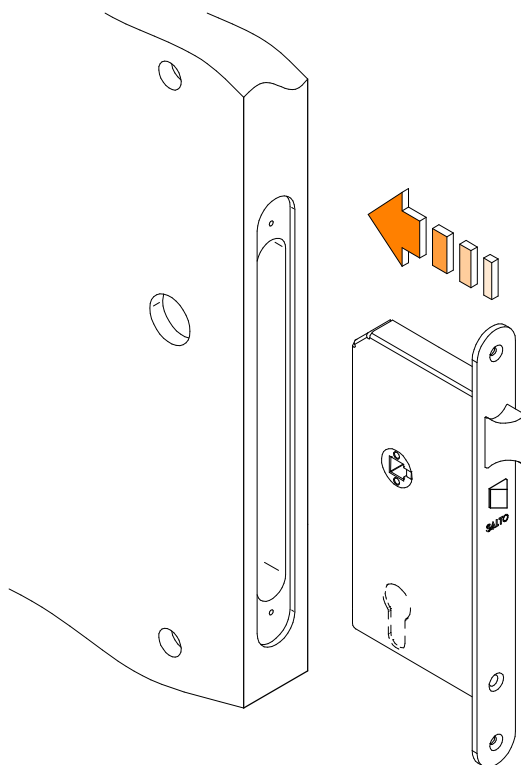 


8

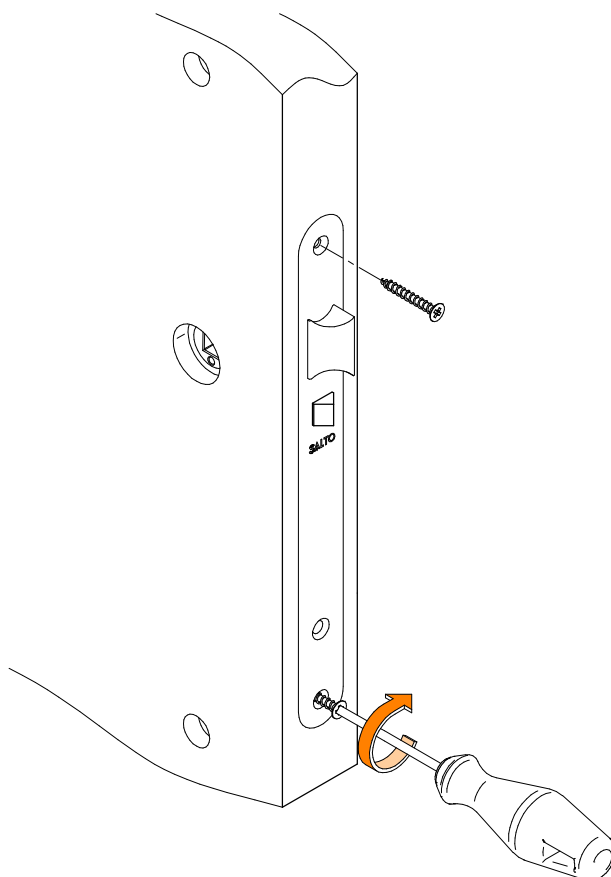 

9

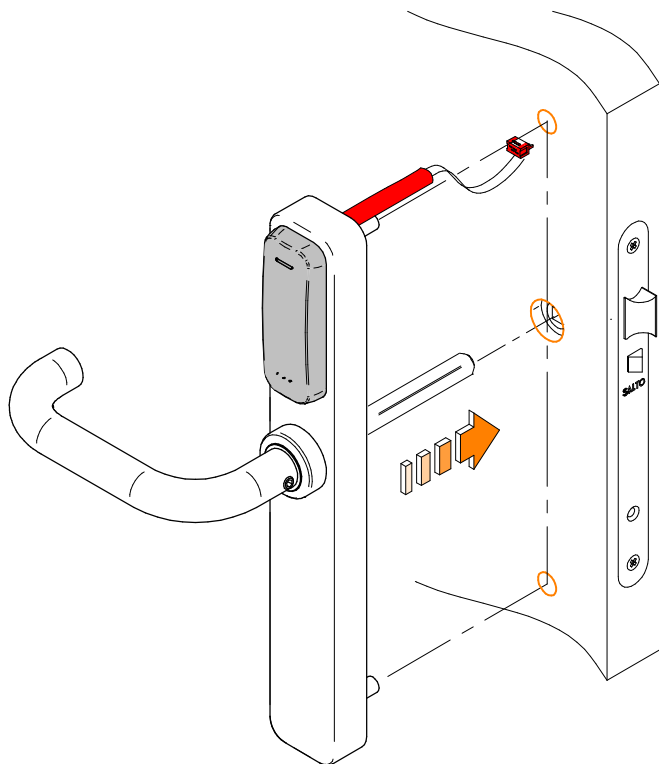 


10

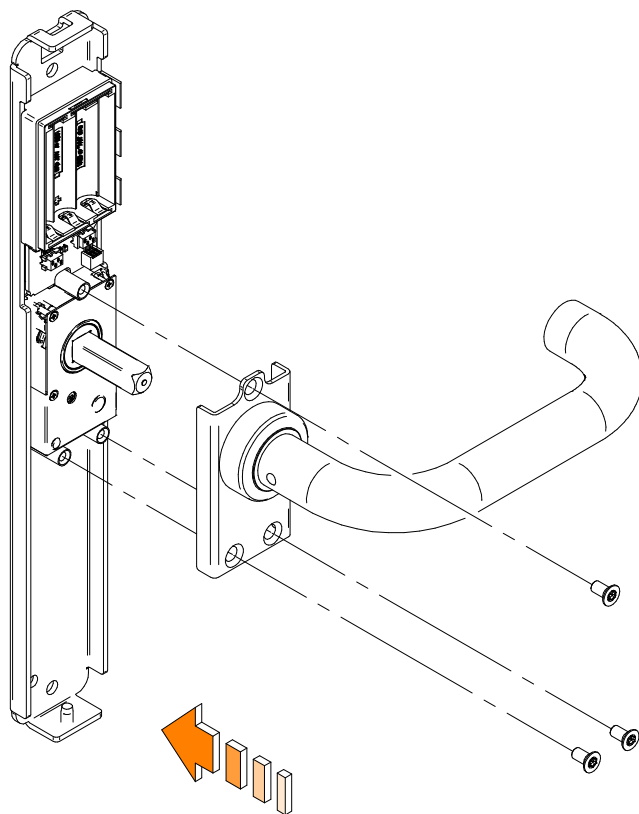 


11

 
Through spindle

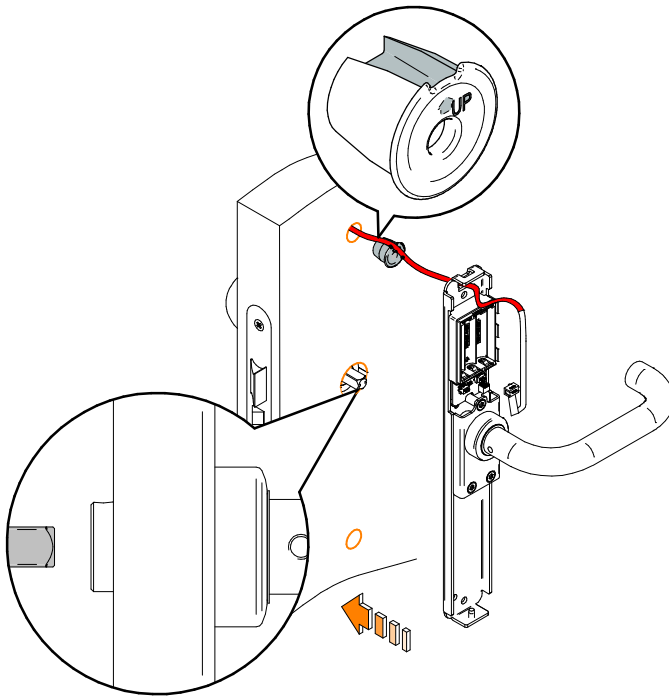


Split spindle

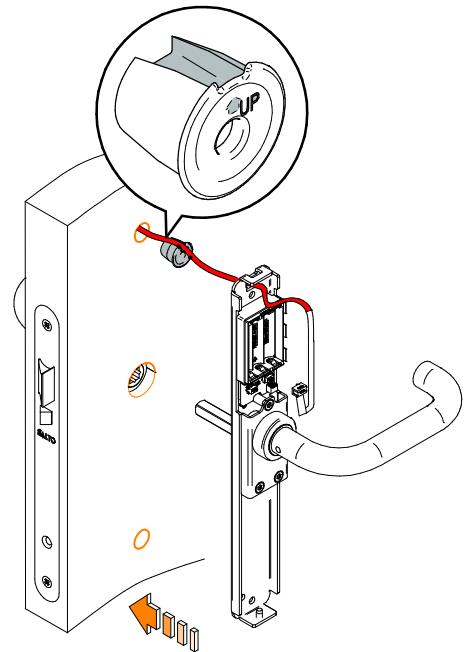 


12

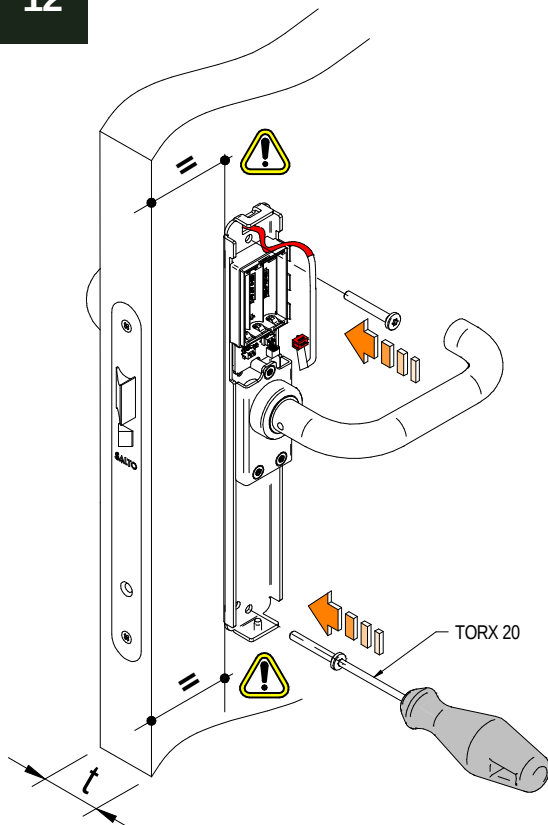 


NOT OK

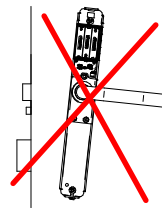 


 	t Door thickness	
3	32 - 47mm	35 mm
4	45 - 60 mm	50 mm
6	60 - 75 mm	30 mm
7	75 - 90 mm	45 mm
9	90 - 105 mm	30 mm
1	105 - 120 mm	45 mm
2		35 mm
A	32 - 53 mm	35 mm
B		45 mm
5		45 mm

 
13

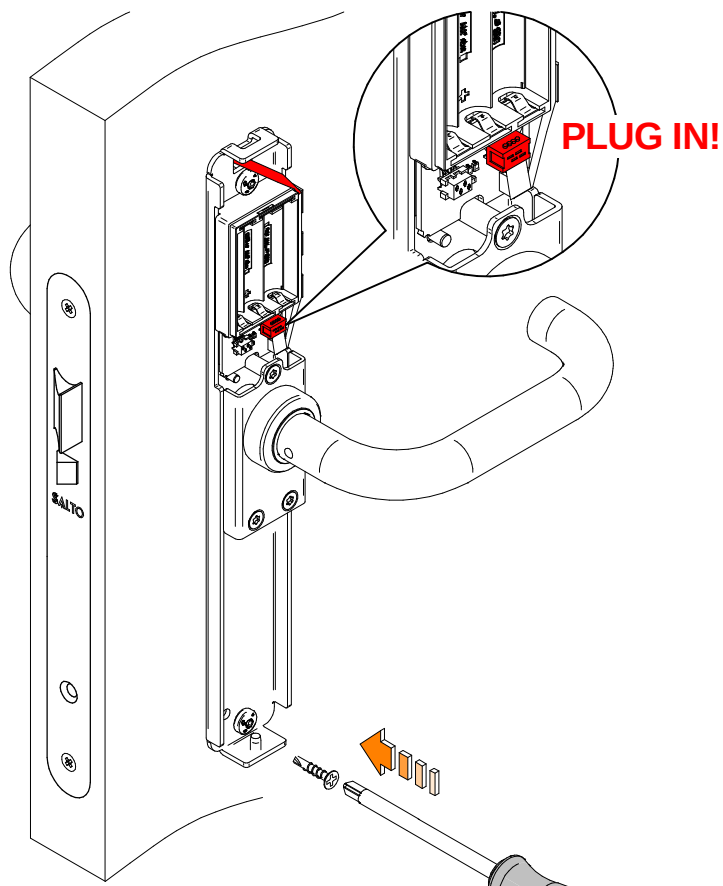


14

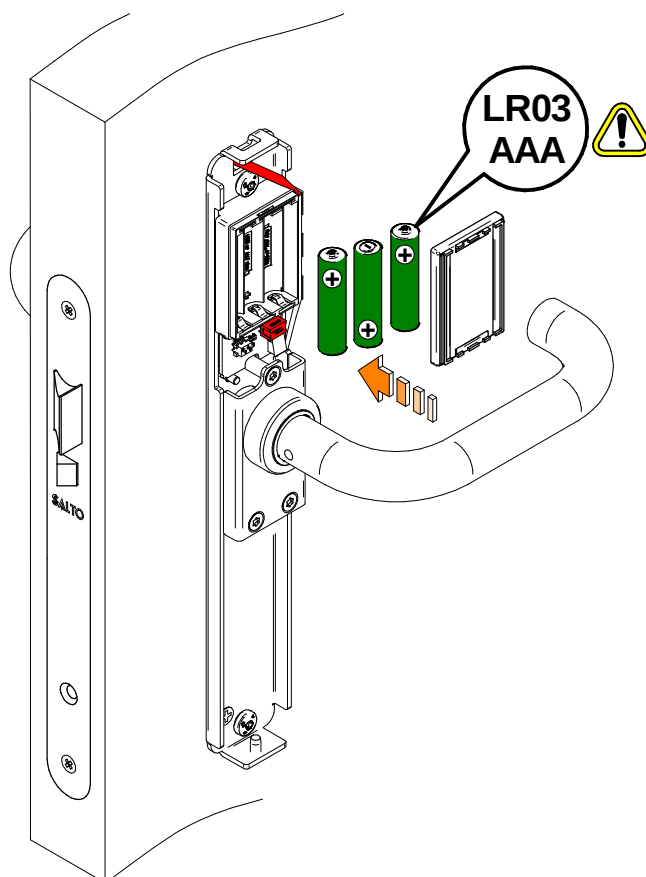 


15

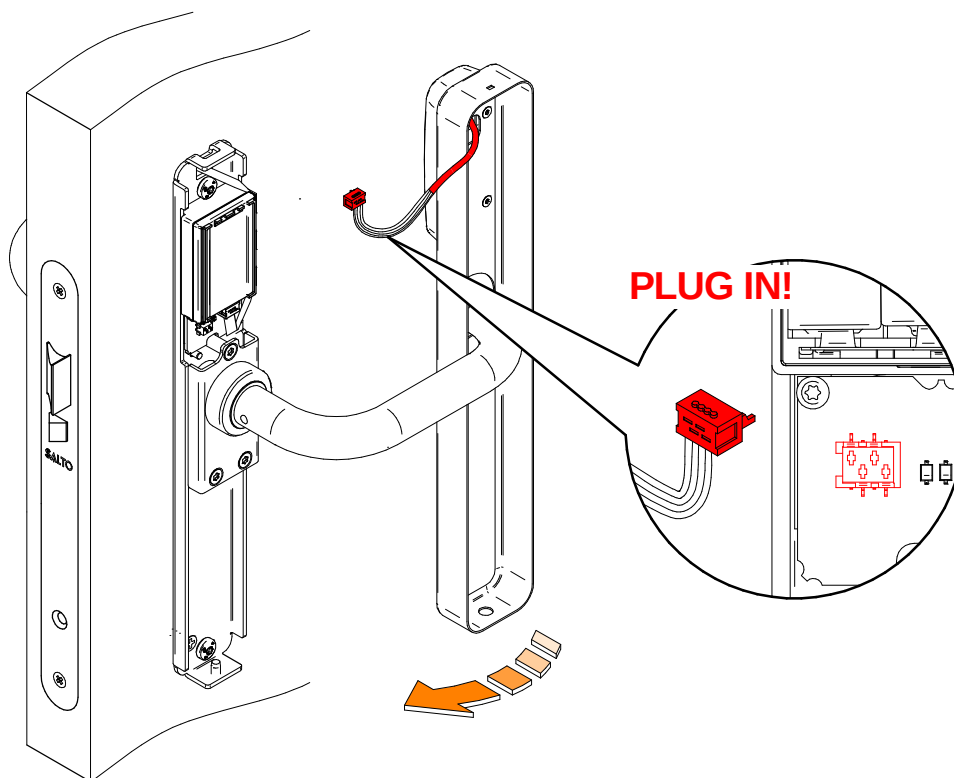 


16

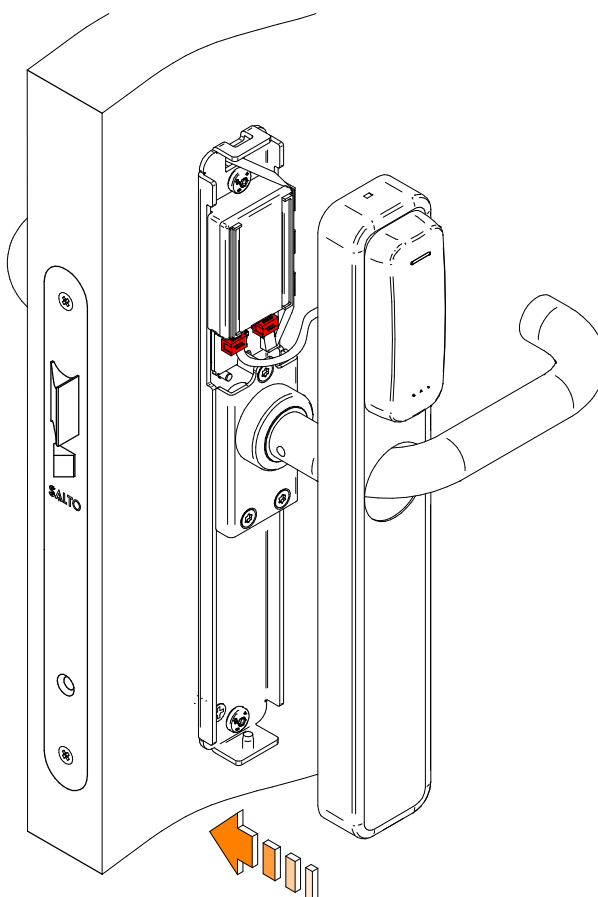 

17

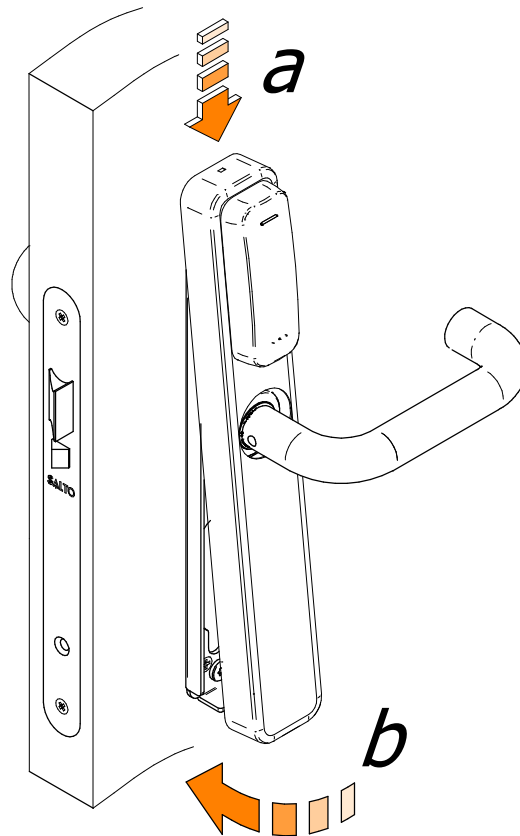 

18

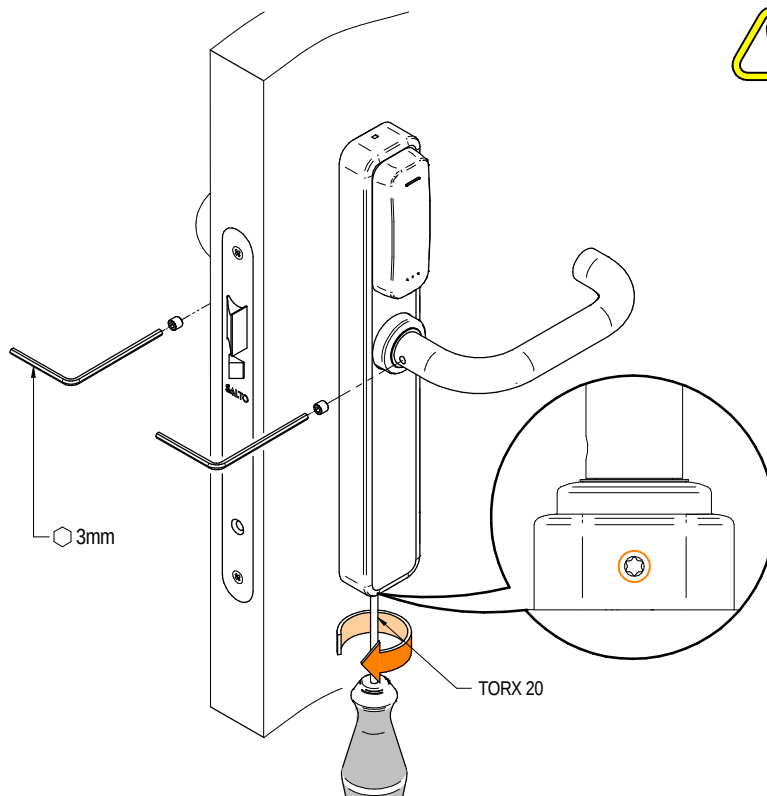 

Eng

At this point do not
close the door
program the lock first

E

No cierre la puerta,
programe la cerradura

D

Tür nicht schließen, Erst
Beschlag programmieren.

F

Ne fermez pas la porte,
programmez la béquille avant

Eng Battery change E Cambio de pilas D Batteriewechsel F Remplacer les pile I Sostituzione pila P Sustituição da pilhas

