 
 
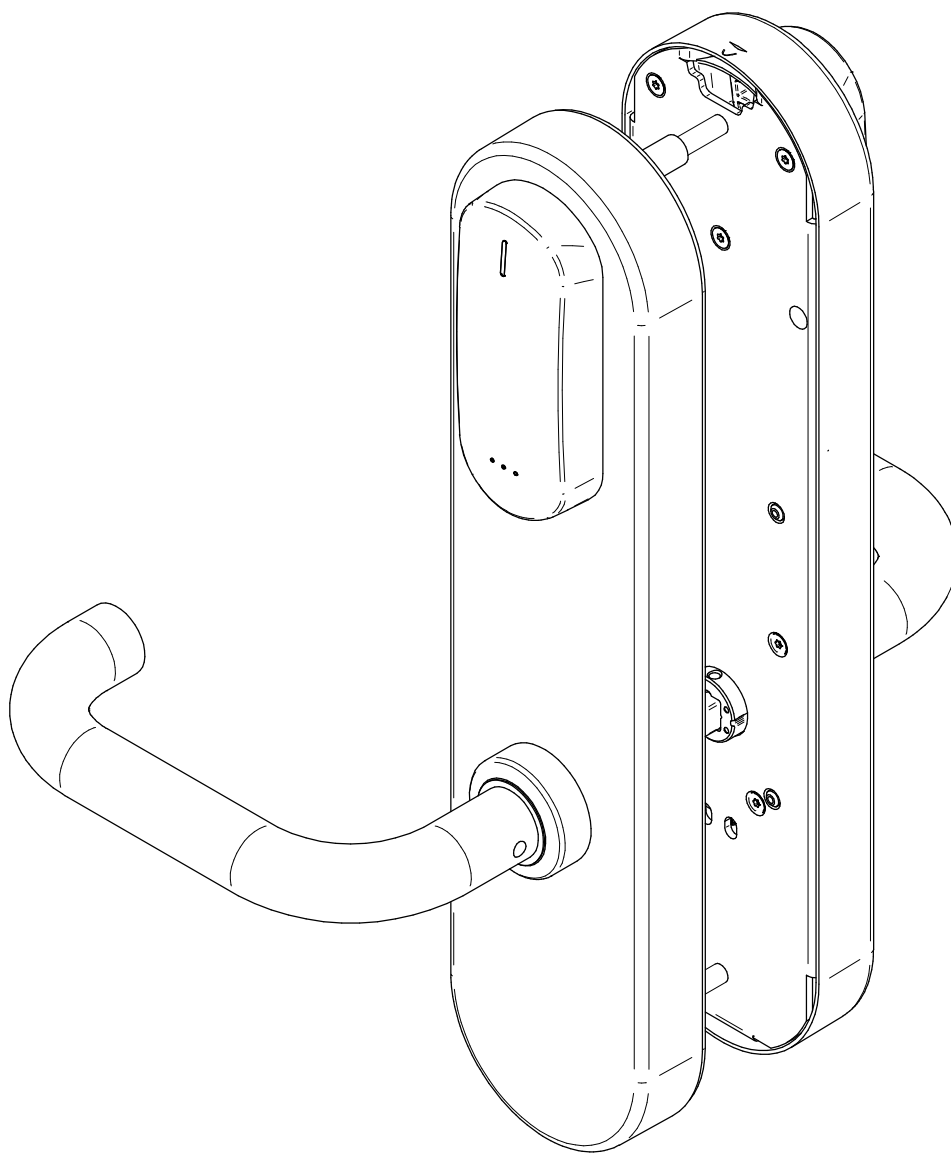 
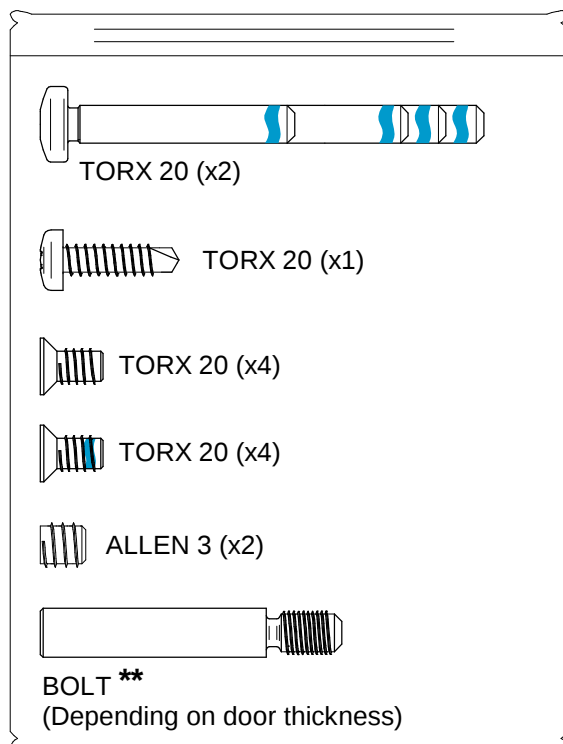 



XS4 Original+ ANSI Double Reader models

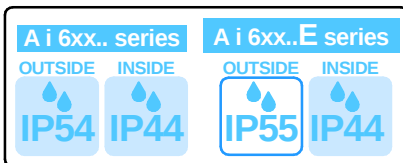

The Salto XS4 Original+ is designed to fit most ANSI profile doors, mortise, cylindrical and tubular locks. Easy to install and retrofit, it can replace your existing door hardware and fits any door with a broad range of different models and functions. The XS4 Original+ incorporates the latest BLUEnet wireless and mobile credentials technology to accommodate access control needs of both today and tomorrow.

 A i 6xx.. D series

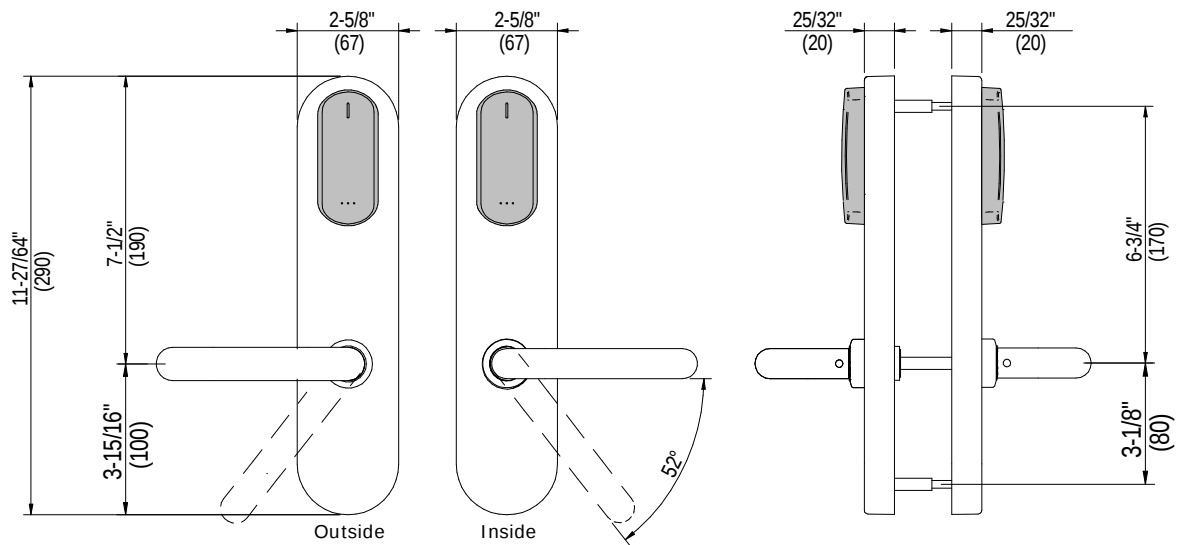

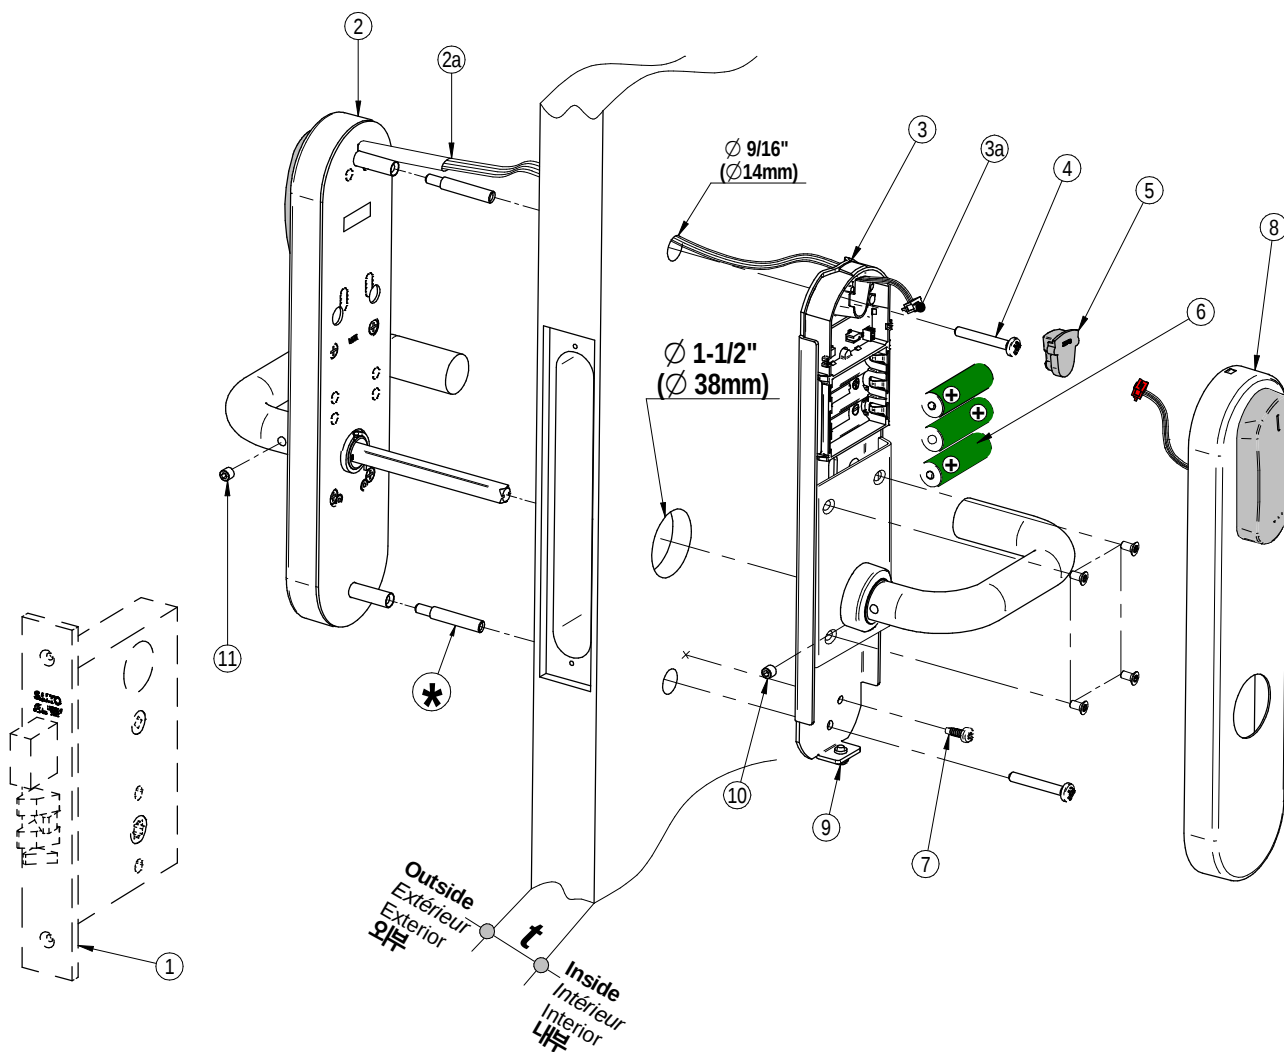


*** Required only for doors that exceed 60mm [2-3/8"] thickness.**

* Requis uniquement pour les portes dont l'épaisseur dépasse 60 mm [2-3/8 po].

* Sólo para puertas de espesor mayor de 60mm [2-3/8"].

 * 두께가 60mm [2-3/8"]를 초과하는 도어에만 필요합니다.

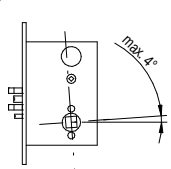

SALTO recommends the use of a mortise lock, with a maximum 4° pre-turn.

SALTO recommande d'utiliser des serrures à mortaiser avec un angle au repos de 4° maximum.
SALTO recomienda utilizar cerraduras con un pregiro máximo de 4°.

 
초기 최대 4° 프리턴. SALTO는 사전 회전이 최대 4°인 모티스락의 사용을 권장합니다.

 
 
 
 


(Eng) Installation (F) Installation (E) Instalación (KR) 설치

1



Through spindle

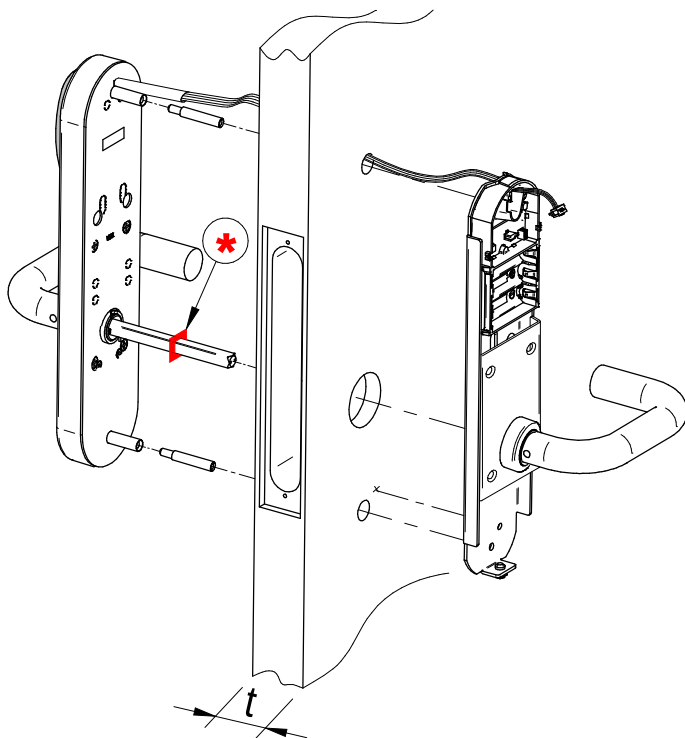

* THROUGH SPINDLE	
Standard models	CUT
	
$t + 1/8" (3mm)$	
For outdoor version models	CUT
	
$t + 7/32" (5,5mm)$	

2

  
Split spindle

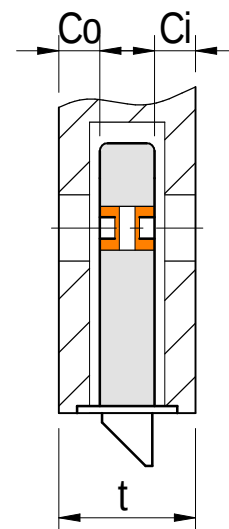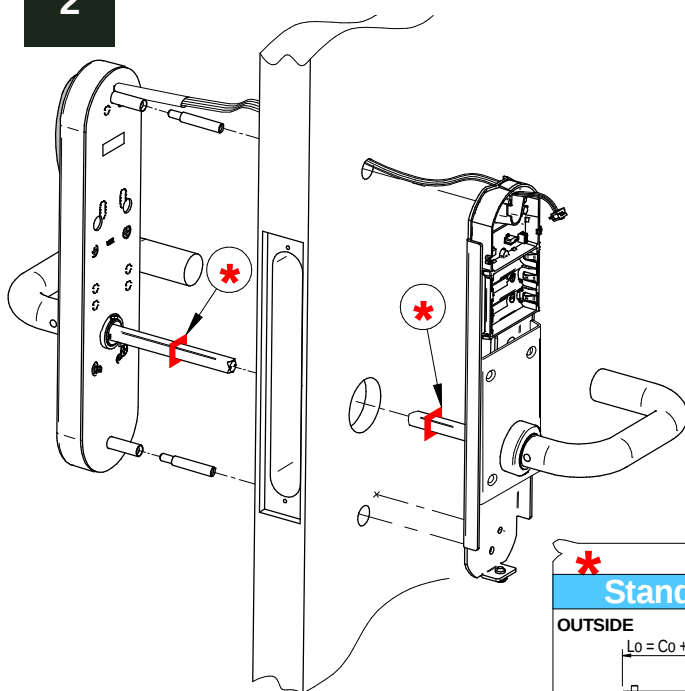


* SPLIT SPINDLE	
Standard models	Outdoor models
OUTSIDE	OUTSIDE
$Lo = Co + 7/32" (5,5mm)$	$Lo = Co + 9/32" (7mm)$
CUT	CUT
INSIDE	INSIDE
$Li = Ci + 7/32" (5,5mm)$	$Li = Ci + 9/32" (7mm)$
CUT	CUT

(Eng) Select handing (F) Choisir le sens de la bêteille (E) Seleccione mano (KR) 핸드링 선택

 
1

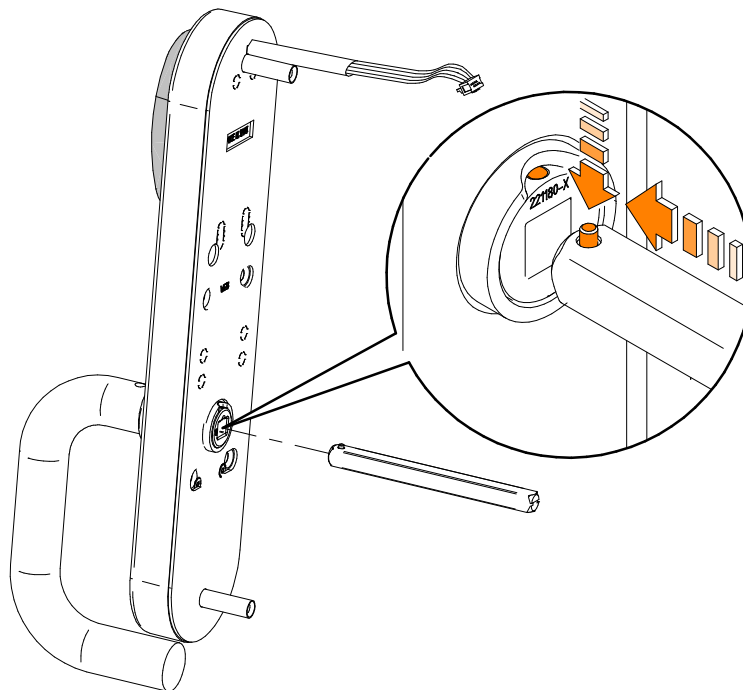


2

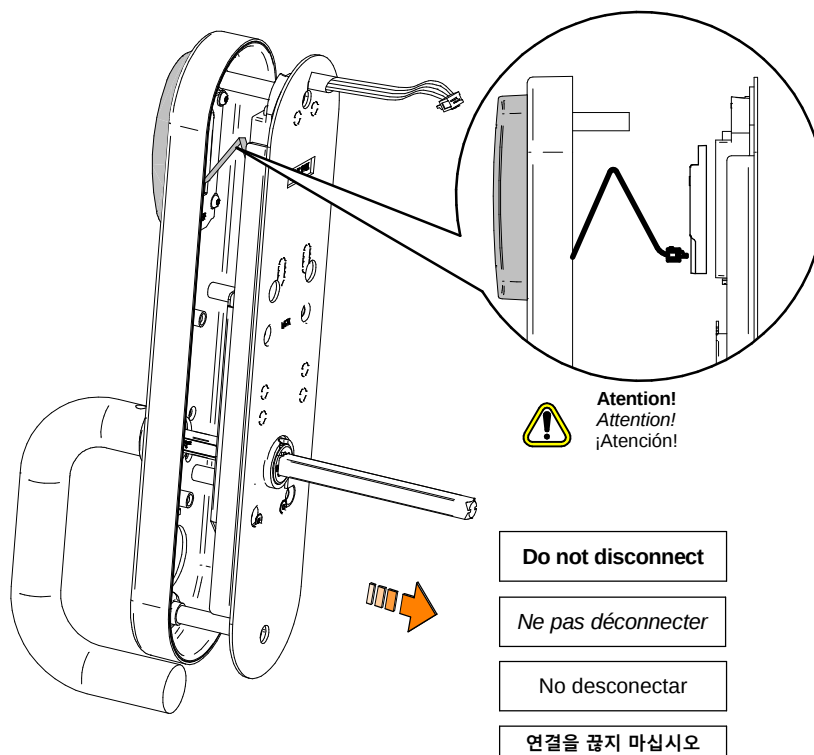 



3

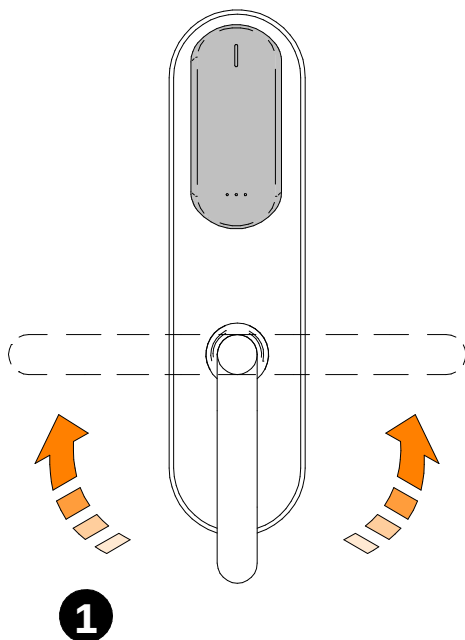 

4

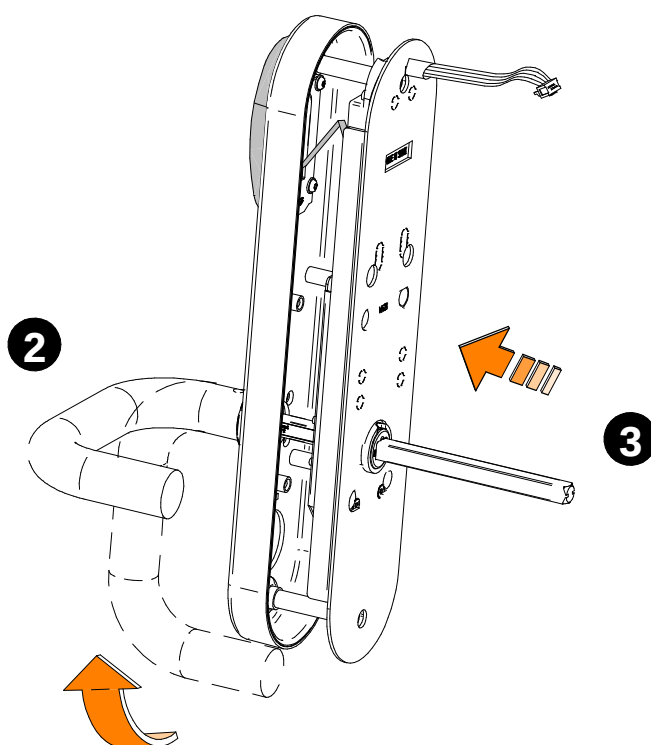 


5

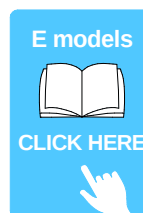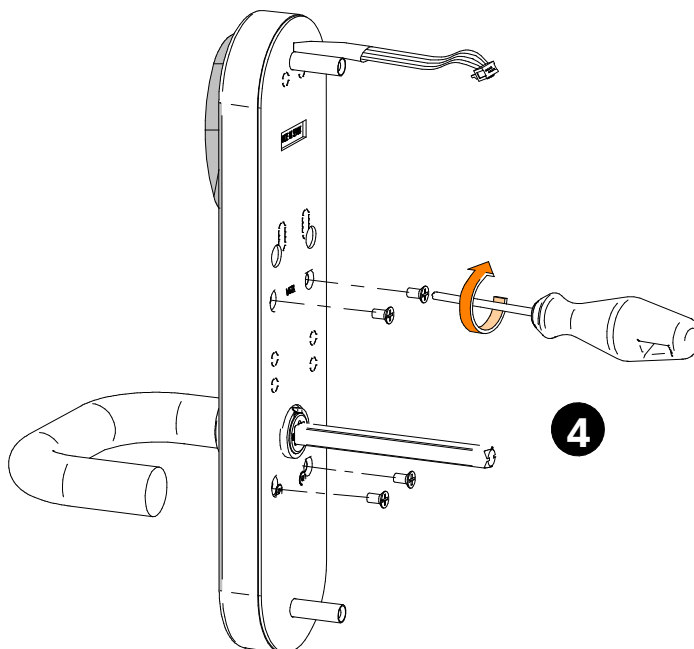  


(Eng) Installation (F) Installation (E) Instalación (KR) 설치

 
1

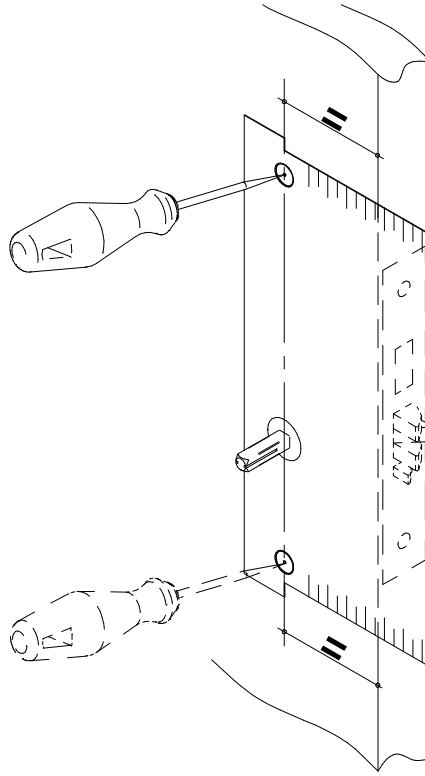


2

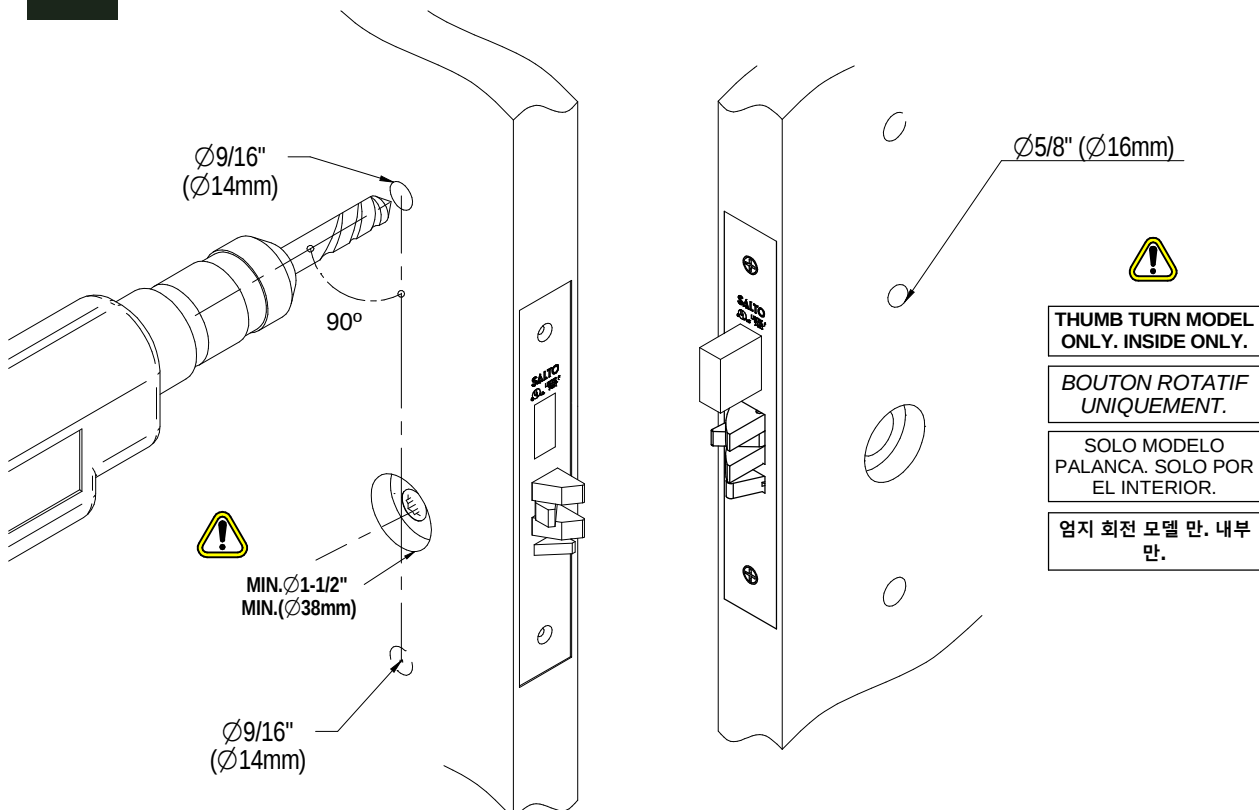 

3

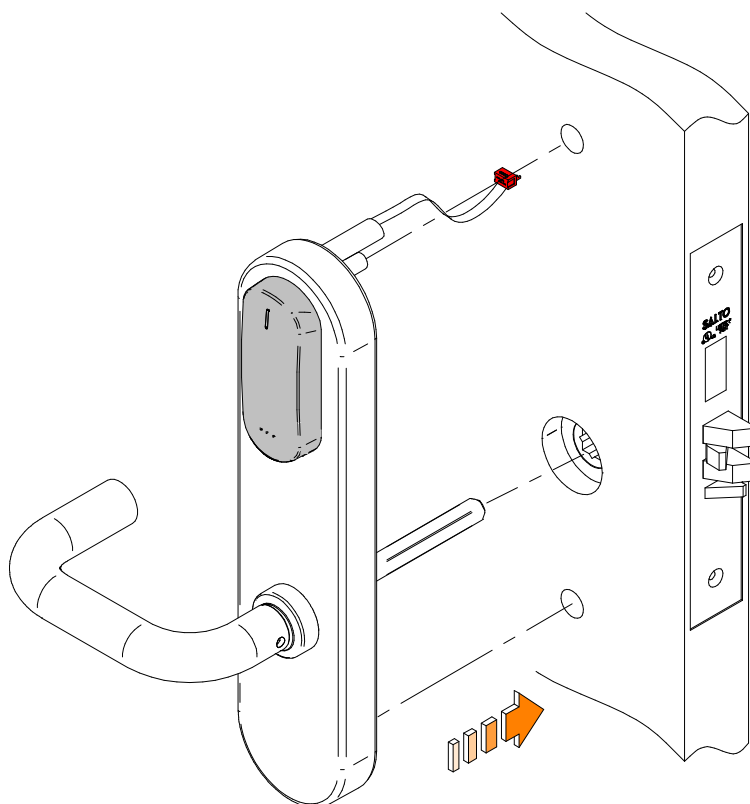 


4

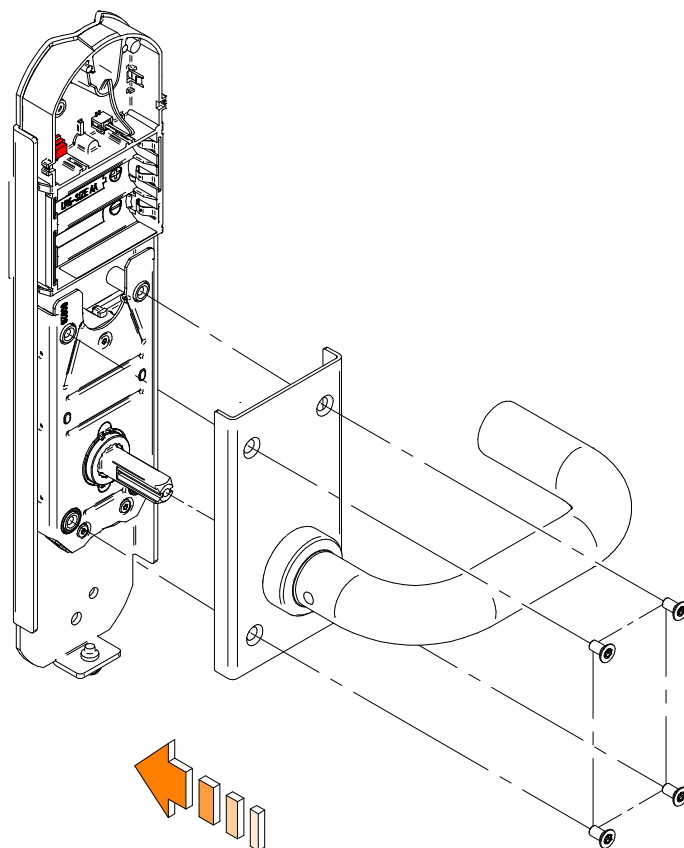 


5


 
Through spindle

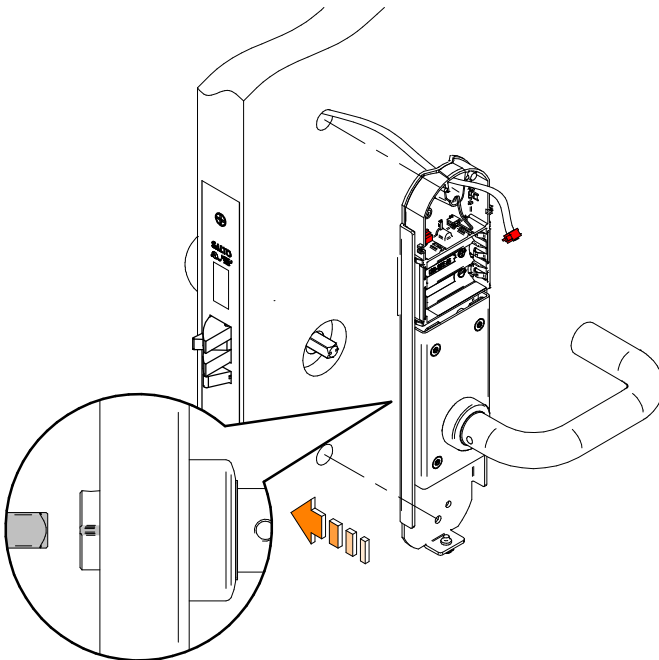


Split spindle

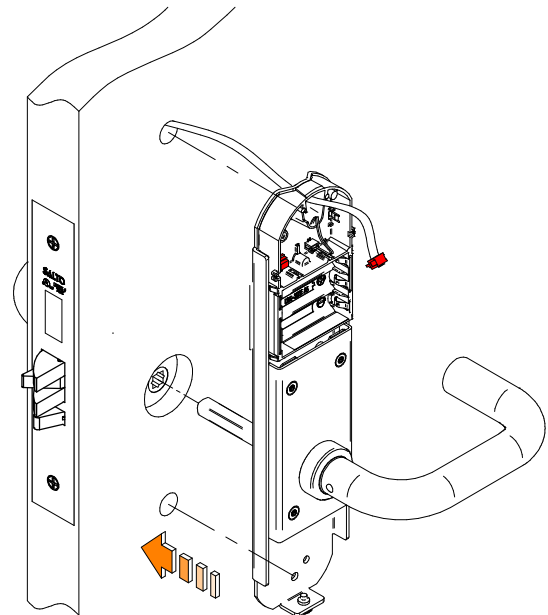 


6

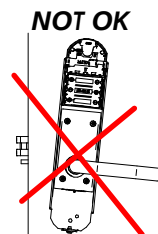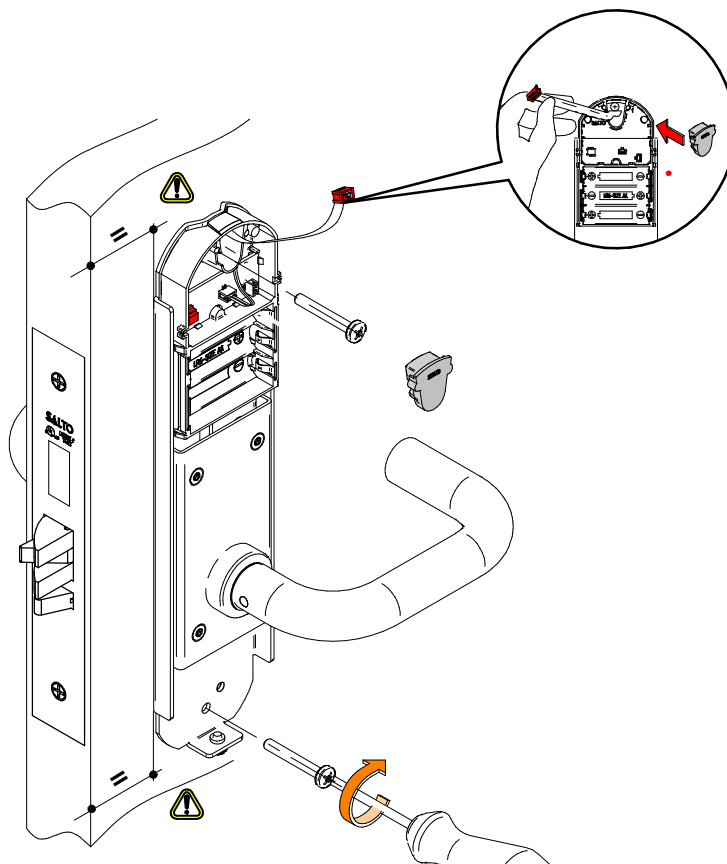  


7

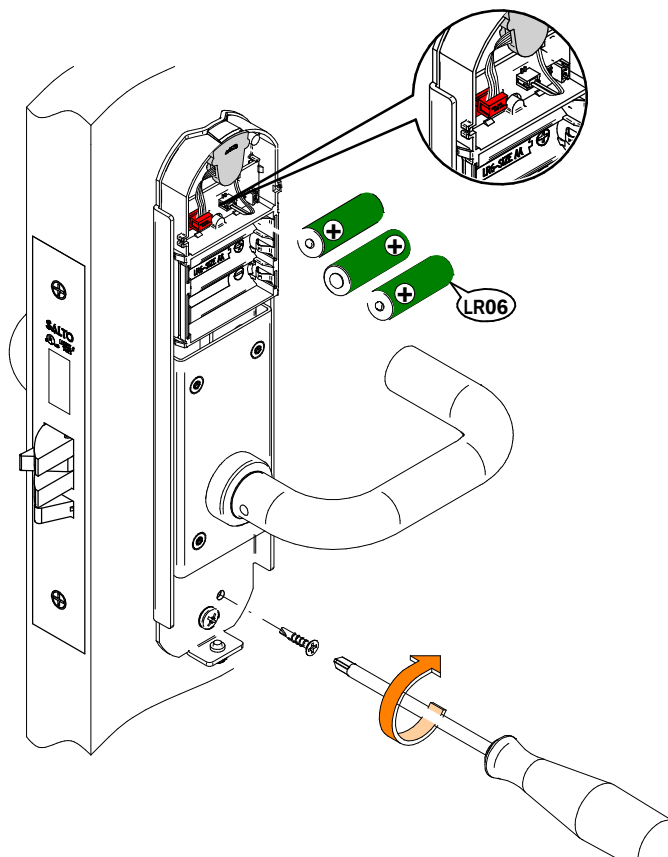 


8

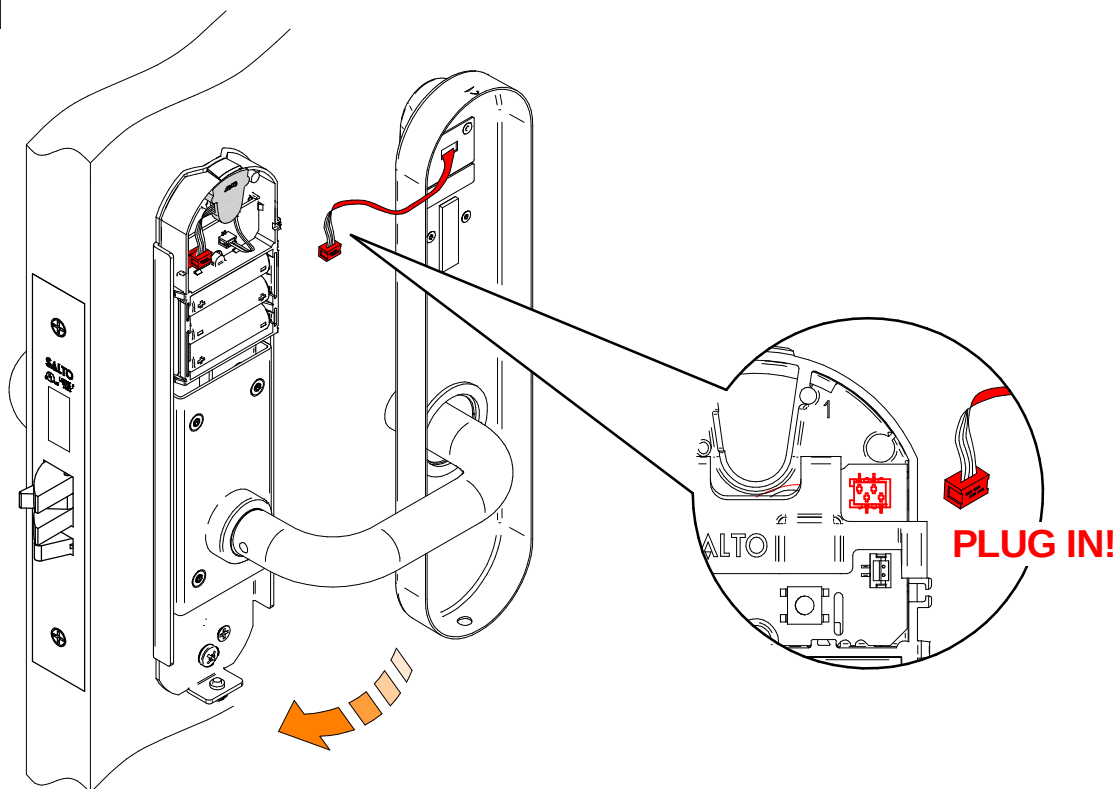 


9

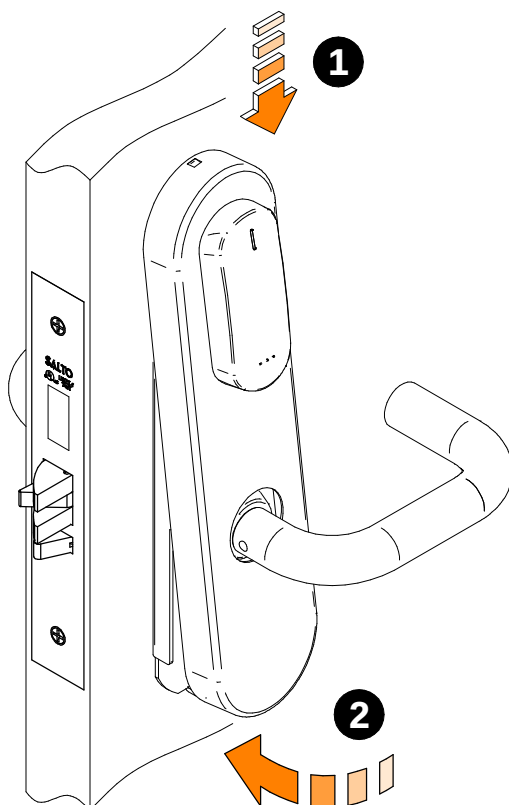 

10

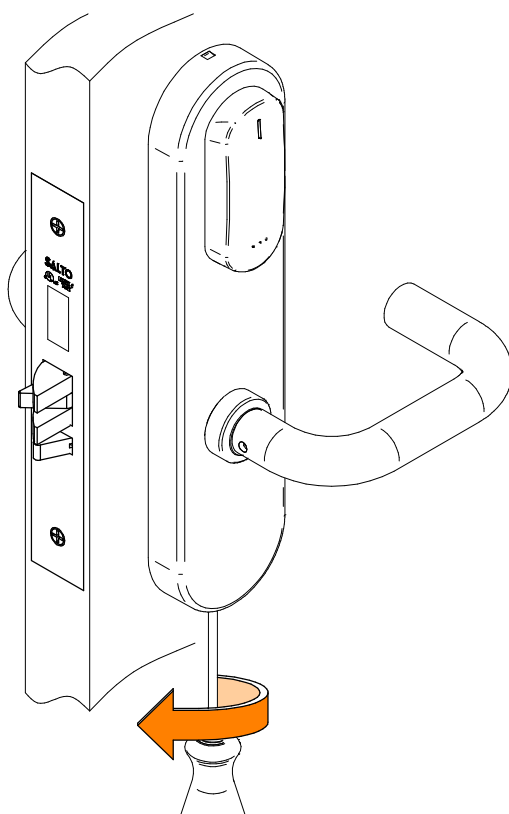 

11

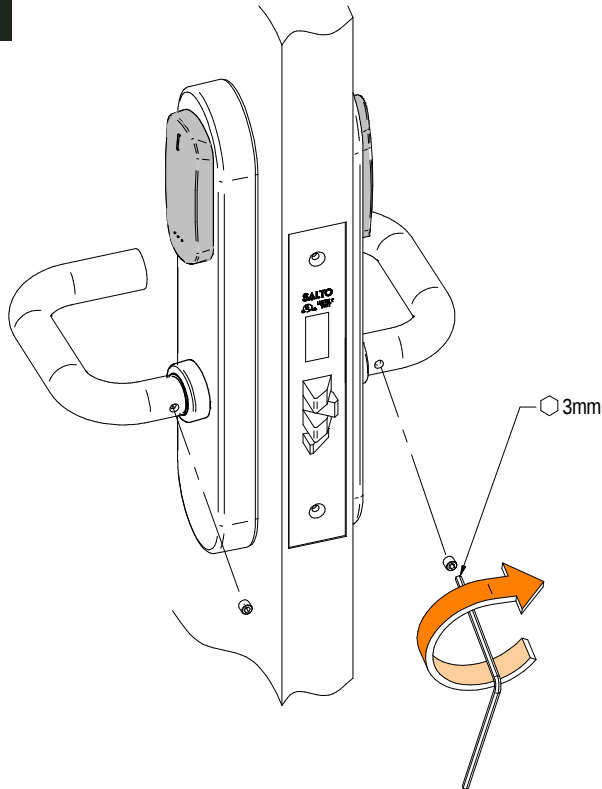 

Eng

**AT THIS POINT DO NOT
CLOSE THE DOOR
PROGRAM THE LOCK FIRST**

Follow user manual

F

**NE FERMEZ PAS LA PORTE.
PROGRAMMEZ LA BÉQUILLE
AVANT**

Consultez le manuel utilisateur

E

**NO CIERRE LA PUERTA.
PROGRAME LA CERRADURA**

Consulte el manual del usuario

KR

이때 문을 닫지 말고 먼저 잠금 장치를
프로그래밍하십시오.

사용자 설명서를 따르십시오

Eng Battery change F Remplacer les piles E Cambio de pilas KR 배터리 교체

LR06

