


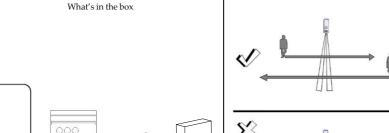




Model: RK107DT

re information about RISCO Group's branches, ors and full product line, please visit **riscogroup.com**



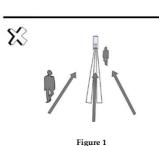

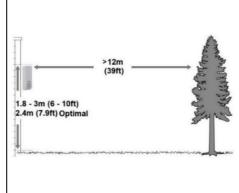


Figure 2

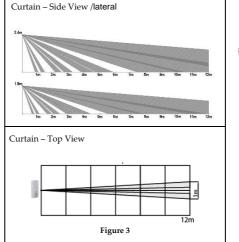




Figure 4



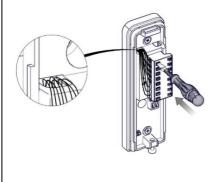


Figure 5





Figure

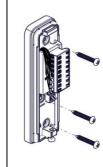


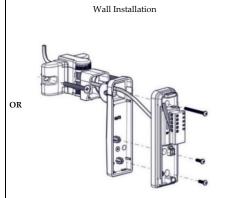

punanunze. paramanas humanama

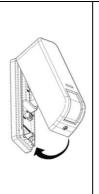

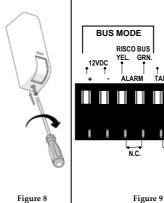

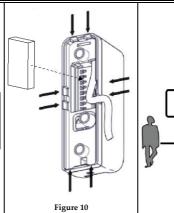

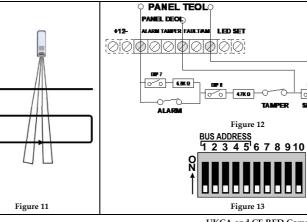


Table 1 ID 1 2 3 4 5 ID 1 2 3 4 5 01 OFF OFF OFF OFF 17 OFF OFF OFF 02 ON OFF OFF OFF OFF ON OFF OFF 03 OFF ON OFF OFF OFF 9 OFF ON OFF 04 ON ON OFF OFF OFF 5 OFF OFF ON OFF OFF FF ON OFF OFF 07 OFF ON ON OFF OFF FAULT/AM 11 OFF ON OFF ON OFF OFF ON OFF 12 ON ON OFF ON OFF 13 OFF OFF ON ON OFF 14 ON OFF ON ON OFF ON OFF ON 15 OFF ON ON ON OFF 31 OFF ON ON ON 16 ON ON ON ON OFF 32 ON ON ON ON ON



1. Description

RISCO Outdoor DT Curtain detector has been designed to provide enhanced 24-hour outdoor protection, with Active IR Anti-mask, Integrated Dual Technology that combines K-Band microwave with PIR sensor and light sensor to minimize false alarms.

Features include

- Selectable detection coverage of up 12m, 5° K-Band Microwave detection
- Active IR Anti-mask
- Various mounting heights 1.8-3m Designed for outdoor installation, UV resistance, IP 65
- Tamper protection

2. Installation

Step 1: Preliminary Considerations (see Figures 1 and 2)

Select the mounting location for best coverage of the area that is to be protected Avoid pointing the detector in the direction of moving objects (such as, swaying trees and bushes).

Step 2: PIR Coverage Pattern (see Figure 3)

For optimal detection results, install the detector at a height of 2.4 m Step 3: Mount the Bracket on the Wall

(See Figures 4, 6a and 6b)

Step 4: Setting the Detector Mode

Standalone Mode

- 1. DIP SW 6 is OFF
- 2. Terminal wiring as in Step 5a RISCO BUS Mode
- 1. DIP SW 6 is ON 2. Wiring: (see Figure 9)
- a) + terminal (Detector power)
- b) Connecting YEL / GRN Detector BUS

Step 5a: Connecting the Terminal Wiring (Standalone Mode)

Connect the terminal wiring according to Figures 5 & 9

Terminal	Description		
+-	+12 VDC, - GND		
ALARM YEL GRN	N.C alarm relay	YEL / GRN (RISCO BUS)	
	NOTE: As defined by DIP SW 6		
TAMPER +-	N.C tamper switch		
AM +-	N.C anti mask alarm relay		

Step 5b: Setting DIP Switch Settings (Standalone Mode)

Set the DIP switch settings according to the table, below:					
DIP SW	Description				
1	LEDs: ON*: Enable / OFF: Disable				
		Low	Mid.	Norm.	High
2	Sensitivity (PIR)	OFF	OFF	ON*	ON
3		OFF	ON	OFF*	ON
4	Anti Masking: ON: Enable / OFF*: Disable				
5	For future use				
6	Mode: OFF*: Relay / ON: BUS (see Defining BUS ID)				

				Figure 7		F
Relay mode	DIP SW 7	D	IP SW 8	DIP SW 9	DIP	SW 10
N.C.	OFF*	OI	FF*	OFF*	OFF	*
DEOL**	ON	OI	N	OFF	OFF	
TEOL**	ON	O	N	ON	ON	

- ** When using external resistors, Dip Switches 7-10 should be set to OFF See Figure 12

Step 5c: Setting MW Sensitivity

Adjust microwave coverage area by using the trimmer
on the PCB.

Step 5d: Available Wiring Channels (see Figure 10) Step 6: Defining the BUS ID (BUS Mode)

See Figure 13

Note: This step is only relevant for detectors that are connected to the RISCO BUS.

Step 7: Securing the Detector to the Bracket (See Figures 7 & 8) Step 8: Registering the Detector into the System

Adding the BUS Detector (LightSYS/ProSYS Plus)

- Select Installer menu: [7] Install > [1] BUS Device > [1] Automatic. The system automatically searches for the detectors BUS ID and assigns a zone (according to the defined DIP switch settings.
- 2. Click OK to confirm
- 3. Configure the BUS detector parameters: Select Installer menu: [2] Zones > [1] Parameters > [2] By Category > [7] Advanced [4] BUS Zone Parameters (see LightSYS / ProSYS Plus Installation Manual).
- Note: For LightSYS Version 5.92 and above / ProSYS Plus Version 1.3.0.x and above.
- 4. Exit the Installer menu.

3. Walk Test

Walk through the entire protected area and observe the LEDs to confirm full coverage (see LED Status). When complete, secure the detector with screw (see Figure 11).

4. LFD Status

	Statao	
LED	State	Description
	Blinks once	Alarm
Red	Flashing	Communication error with the system (BUS Mode
		only)
Green	Blinks once	Microwave detection
0	Blinks once	PIR detection
Orange	Flashing	AM (Anti mask) detection
All LEDs	Flashing	Unit initialization upon power up
	(consecutively)	

Note: DIP-SW 1 should be in ON position to enable the LED indications (Standalone Mode)

5. Self-Test

Every hour the detector performs an internal self-test for both PIR and MW channels. A fault detected in the self-test will be indicated by a momentary open anti-mask relay (in relay mode) or by a corresponding message in the panel (in BUS mode).

6. Technical Specifications

N.C. N.C.

Parameter	Description
Power	12VDC
Current Consumption: Standalone Mode Bus Mode	15 mA 10 mA
Power Output	24 GHz: 100mW max.
Operating Temperature	-20°C to 60°C (-4°F to 140°F)
Storage Temperature	-25°C to 70°C (-13°F to 158°F)
Humidity Range	Average relative humidity: 90% IP65
Weight	107 grams (3.77 oz.)
Dimensions (LxHxD)	123 x 35 x 49 mm (4.84 x 1.38 x 1.92")
Frequency	24 GHz

7. Ordering Information

P/N	Description
RK107DTB000C	Wired Curtain DT AM, Bus

UKCA and CE RED Compliance Statement:

TAMPER SHORT

Hereby, RISCO Group declares that this equipment is in compliance with the essential requirements of the UKCA Radio Equipment Regulations 2017 and CE Directive 2014/53/EU. For the UKCA and CE Declaration of Conformity please refer to our website:

Figure 12

Figure 13

Standard Limited Product Warranty ("Limited Warranty")

Standard Limited Product Warranty ("Limited Warranty")

RISCO Ltd. ("RISCO") guarantee RISCO's hardware products ("Products") to be free from defects in materials and workmanship when used and stored under normal conditions and in accordance with the instructions for use supplied by RISCO, for a period of (i) 24 months from the date of delivery of the Product (the "Warranty Period"). This Limited Warranty covers the Product only within the country where the Product was originally purchased and only covers Products purchased as new.

Contact with customers only. This Limited Warranty is solely for the benefit of customers who purchased the Products directly from RISCO or from an authorized distributor of RISCO. RISCO does not warrant the Product to consumers and onthing in this Warranty obligates RISCO to accept Product returns directly from end users who purchased the Products for their own use from RISCO's customer or from any installer of RISCO, or otherwise provide warranty or other services to any such end user fuelty. RISCO's authorized distributor or installer shall handle all interactions with its end users in connection with this Limited Warranty, RISCO's authorized distributor or installer shall handle and avaranties, representations, guarantees or statements to its end users or other third parties that suggest that RISCO has any warranty or service obligation to, or any contractual privy with, any recipient of a Product.

Remedies. In the event that a material defect in a Product is discovered and reported to RISCO during the Warranty Period, RISCO shall accept return of the defective Product, or (ii) provide a replacement product to the customer.

Return Material Authorization. In the event that you need to return your Product for repair or replacement, RISCO will provide you with a Return Merchandise Authorization Number (RMA#) as well as return instructions. Do not return your Product without prior approval from RISCO. Any Product returned without a valid, unique RMA# will be refused and returned t

and this Limited Warranty are contingent upon the full payment by customer for such Product and upon a proven weekly testing and examination of the Product functionality.

Limitations. This Limited Warranty is the only warranty made by RISCO with respect to the Products. The warranty is not transferable to any third party. To the maximum extent permitted by applicable law, this Limited Warranty shall not apply and will be void if (i) the conditions set forth above are not met (including, but not limited to, full payment by customer for the Product and a proven weekly testing and examination of the Product functionality; (ii) if the Products or any part or component thereof: (a) have been subjected to improper operation or installation; (b) have been subject to neglect, abuse, willful damage, abnormal working conditions, failure to follow RISCO's instructions (whether oral or in writing); (c) have been misused, altered, modified or repaired without RISCO's written approval or combined with, or installed on products, or equipment of the customer or of any third party; (d) have been damaged by any factor beyond RISCO's reasonable control such as, but not limited to, power failure, electric power surges, or unsuitable third party components and the interaction of software therewith or (e) any failure or delay in the performance of the Product attributable to any means of communication provided by any third party service provider, including, but not limited to, GSM interruptions, lack of or internet outage and/or telephony failure. BATTERIES ARE EXPLICITLY EXCLUDED FROM THE WARRANTY AND RISCO SHALL NOT BE HELD RESPONSIBLE OR LIABLE IN RELATION THERETO, AND THE ONLY WARRANTY AND RISCO SHALL NOT BE HELD RESPONSIBLE OR LIABLE IN RELATION THERETO, AND THE ONLY WARRANTY AND RISCO SHALL NOT BE HELD RESPONSIBLE OR LIABLE IN RELATION THERETO, AND THE ONLY WARRANTY was well as the product or which the Product is a component of.

This Limited Warranty applies only to Products manufactured by or for RISCO. Further, this Limite

manufactures of warranty in the Product is a component of a compon