


Guide for pilot screw hole

001s 355s and Lockwood Nightlatches have the same front screw hole locations

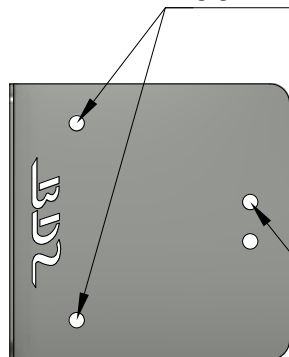

Guide for 32mm DIA hole for the 201 cylinder

Always use the top hole

The 201 hole is offset to the lock depending on the handing.

When the template is flipped, the bottom hole becomes the new top hole.

DO NOT USE THE BOTTOM HOLE.

BDS Rimlock template 60mm backset 001, 355, Lockwood Nightlatch

Product for trained individuals only.

Always follow the manufacturer's instructions for installation.

Always check measurements before starting.

