



Instructions for Mini Dome Bracket Installation

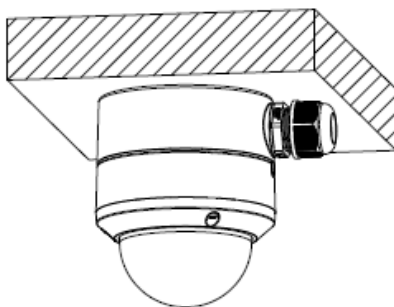


P/N: RVIM0115B0RA

Quick Guide


Box Dimensions

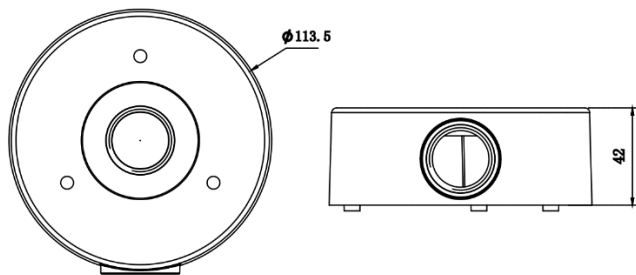


Accessories

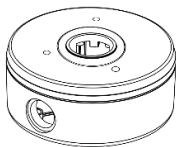

RVIM0115B0RA

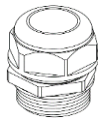


Waterproof Plug

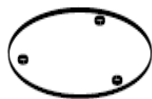

Mounting Paper



Screw A

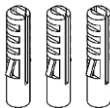


Screw B



Screw C


Tools

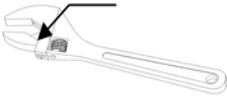


Monkey Wrench



Hex Wrench

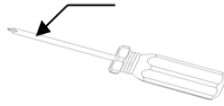


Cross Screwdriver

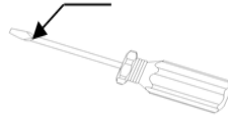


Straight Screwdriver

Ceiling Mounting


1. Paste the mounting paper to the corresponding installation position and make screw holes.
2. Hammer three screws **B** into the holes as shown below.

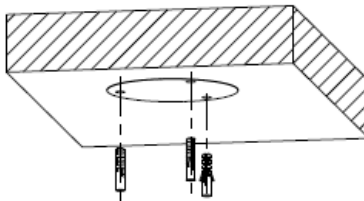


3. Align the three screws with the holes and lock the bottom of the box.
4. Place the cable into the box through the waterproof plug and tighten it.

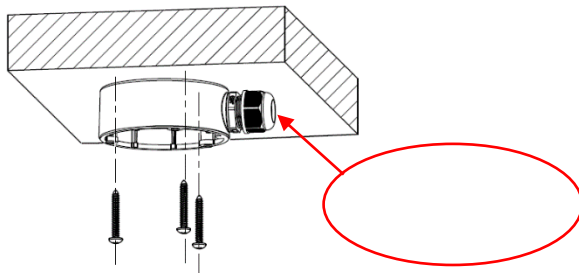

- 5. Unscrew the Dome Camera’s transparent cover and remove it.
- 6. Lock the camera base to the bottom of the box.
- 7. Connect the network cable securely and tighten the screws.

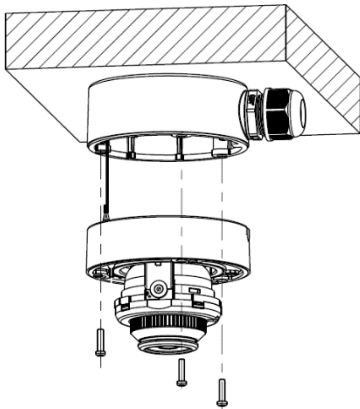

- 8. Lock the camera cover to the box as shown below to complete the installation.

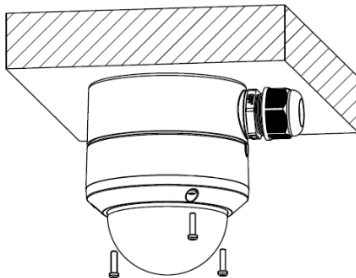

Supported Camera

P/N	Description
RVCM32A330RA	VUpoint 5MP PoE Dome AI Camera

